

4


3

2



1

- 1.0 GENERAL NOTES
- 1.1 ALL METRIC DIMENSIONS ARE IN BRACKETS [X. X]
- 1.2 FOR PATENT INFO: <https://www.adwpat.com>
- 2.0 DESIGN NOTES
- 3.0 MANUFACTURING/SPECIAL REQUIREMENTS
- 3.1 TIGHTEN ALL BOLTS SECURING FLAT PLATES BY THE TURN-OF-NUT METHOD. TIGHTEN ALL U-BOLTS USING TURN-OF-NUT METHOD WITH ATTENTION TO LEAVE EQUAL DISTANCE AND EQUAL FORCE ON EACH LEG OF THE U-BOLT.
- 4.0 TEST
- 5.0 PACKAGING
- 5.1 PACKAGING SHALL MEET ANDREW REQUIREMENTS PER DOCUMENT IS-PL-3005
- 5.2 PRINTED DOCUMENT TO BE PLACED INSIDE POLYBAG AND THEN IN SHIPPING CONTAINER
- 5.3 EXTRA HARDWARE MAY BE SUPPLIED, BAGGED AND SHIPPED

REVISIONS			
REV.	DESCRIPTION	DATE	APPROVED
A	INITIAL RELEASE	MSM 27OCT10	TP
B	ADD CLIPS AND HARDWARE	MSM 24FEB15	8000007072
C	REPLACED MTC790204 WITH EQHR01	RJC 15JUN15	8000008700
D	ADDED PAGES 3-7 FOR ASSEMBLY	DRR 02JUN17	8000023672
E	UPDATED DRAWING FORMAT	NSUN 12SEP25	BA1025 50104924AMO

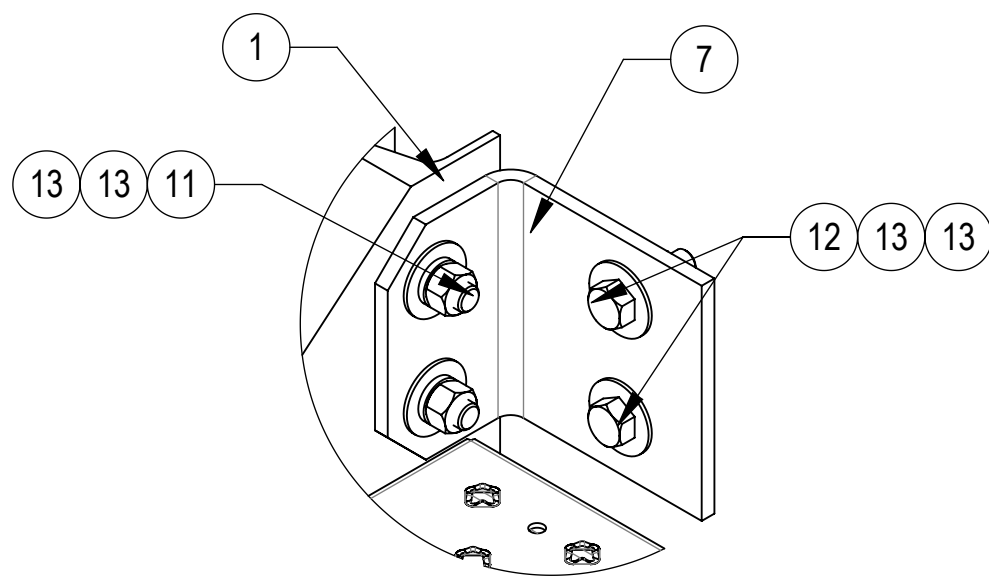

DETAIL A
SCALE 1 : 4

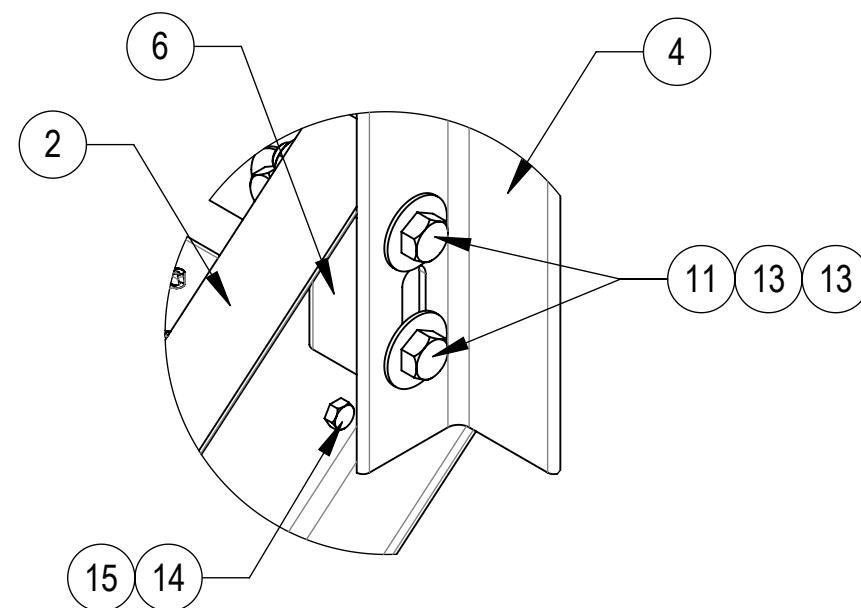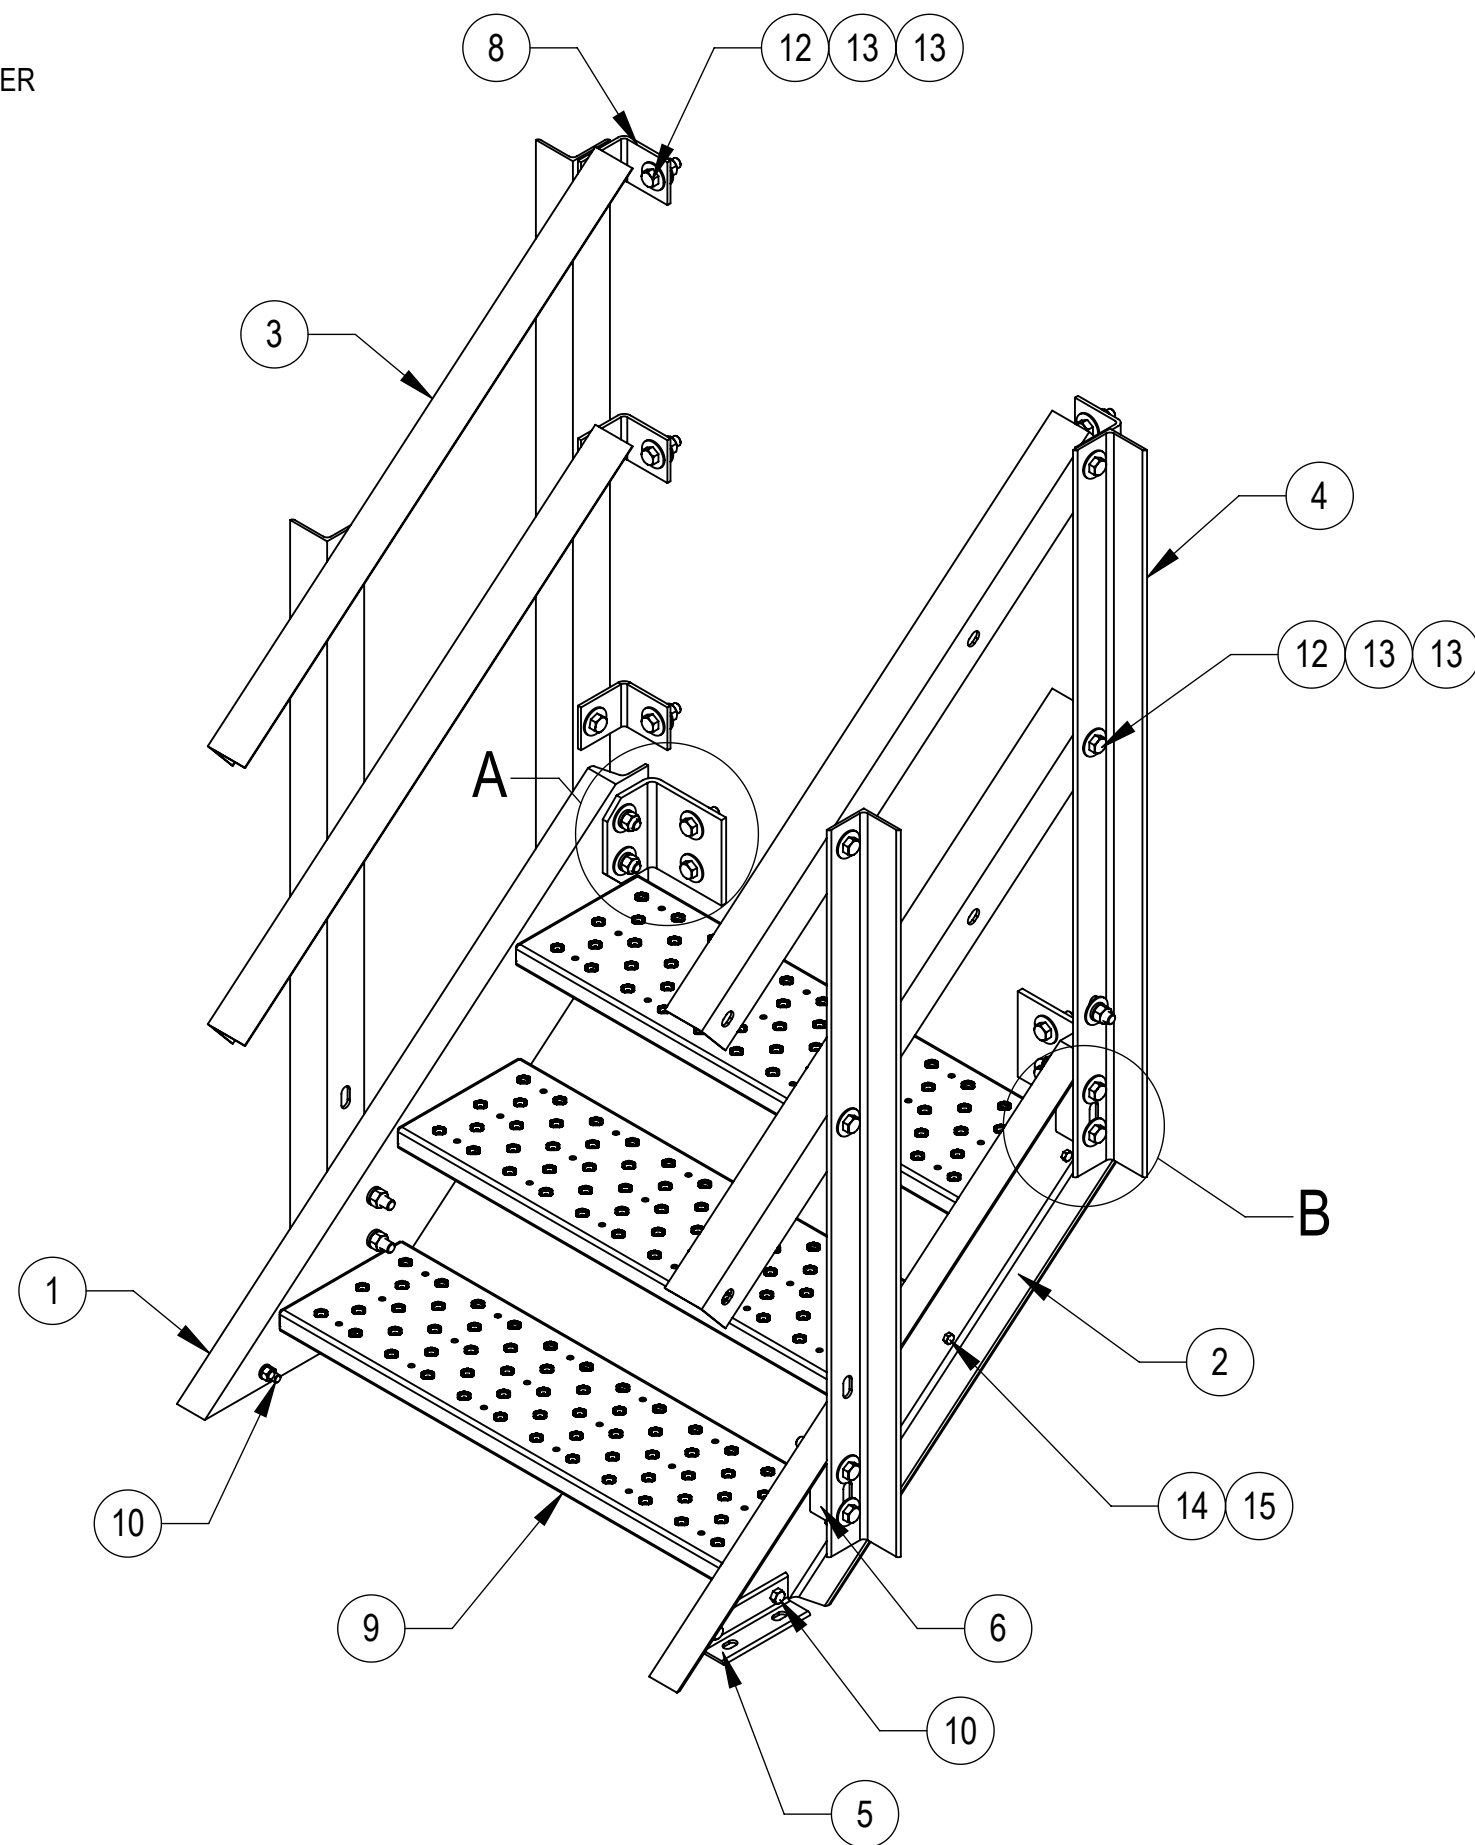

DETAIL B
SCALE 1 : 4

COMPONENT PART NUMBERS PROVIDED FOR ASSEMBLY PURPOSES;
INDIVIDUAL COMPONENTS MAY BE SHIPPED AS PARTS WITHIN AN INCLUDED KIT.

ITEM	PART NO.	DESCRIPTION	QTY.	WEIGHT	NOTE NO.
1	MTC9055301	RIGHT STAIR LEG	1	35.87 LBS	
2	MTC9055302	LEFT STAIR LEG	1	35.87 LBS	
3	MTC9055303	STEP HANDRAIL	4	12.45 LBS	
4	EQHR01	HANDRAIL POST	4	15.52 LBS	
5	MTC901605	STAIR ANCHOR CLIP	2	1.32 LBS	
6	MTC901607	RAILING SPACER	4	1.40 LBS	
7	MTC901608	STEP CHANNEL MOUNTING ANGLE	2	5.57 LBS	
8	MTC905505	HANDRAIL CLIP	6	1.42 LBS	
9	EQPS36	STEP, GALVANIZED	3	17.05 LBS	
10	GB-04145	1/2" X 1-1/2" GALV BOLT KIT	4	0.13 LBS	
11	GB-05405	5/8" X 4" GALV BOLT KIT	8	0.43 LBS	
12	GB-05205	5/8" X 2" GALV BOLT KIT	20	0.26 LBS	
13	GWF-05	5/8" GALV FLAT WASHER, 1.70D	52	0.06 LBS	
14	GB-03125	3/8" X 1-1/4" GALV BOLT KIT	12	0.06 LBS	
15	GWF-03	3/8" GALV FLAT WASHER	12	0.01 LBS	

DENSITY		lbs/in ³
MASS	279.11	lbs
VOLUME	988.87	in ³
SURFACE AREA	10817.25	in ²
HEIGHT	71.3"	
LENGTH	46.5"	
WIDTH	36.3"	

Confidential



TOLERANCES			SAP MATERIAL MASTER		
1 PLACE	.X[X] ± 0.12[3.0]	3 PLACE	.XXX[X] ± 0.030[0.8]	EQ-STEP-3	
2 PLACE	.XX[X] ± 0.060[1.5]	ANGLES	± 2°		
FINISH			MATERIAL		

UNLESS OTHERWISE SPECIFIED
DIMENSIONS ARE IN INCHES
INTERPRET PER ANSI Y 14.5M-1984

	NAME	DATE	TITLE EQ-P STEP KIT (3) STEPS, 29" ELEVATION	
CE	MSM	27OCT10		
RW	NSUN	09/24/2025		
AD	YMENG	09/25/2025		
RE	YMENG	10/09/2025	SCALE 1:10	DOCUMENT NO. EQ-STEP-3
ECN 50104924AMO				

SIZE	Auth Group	INSL	MODEL			DRAWING			SHEET 1 OF 7
C			VERSION 01	STATUS RE	REVISION F	VERSION 01	STATUS RE	REVISION F	

D

C

B




A

4

3

2


1

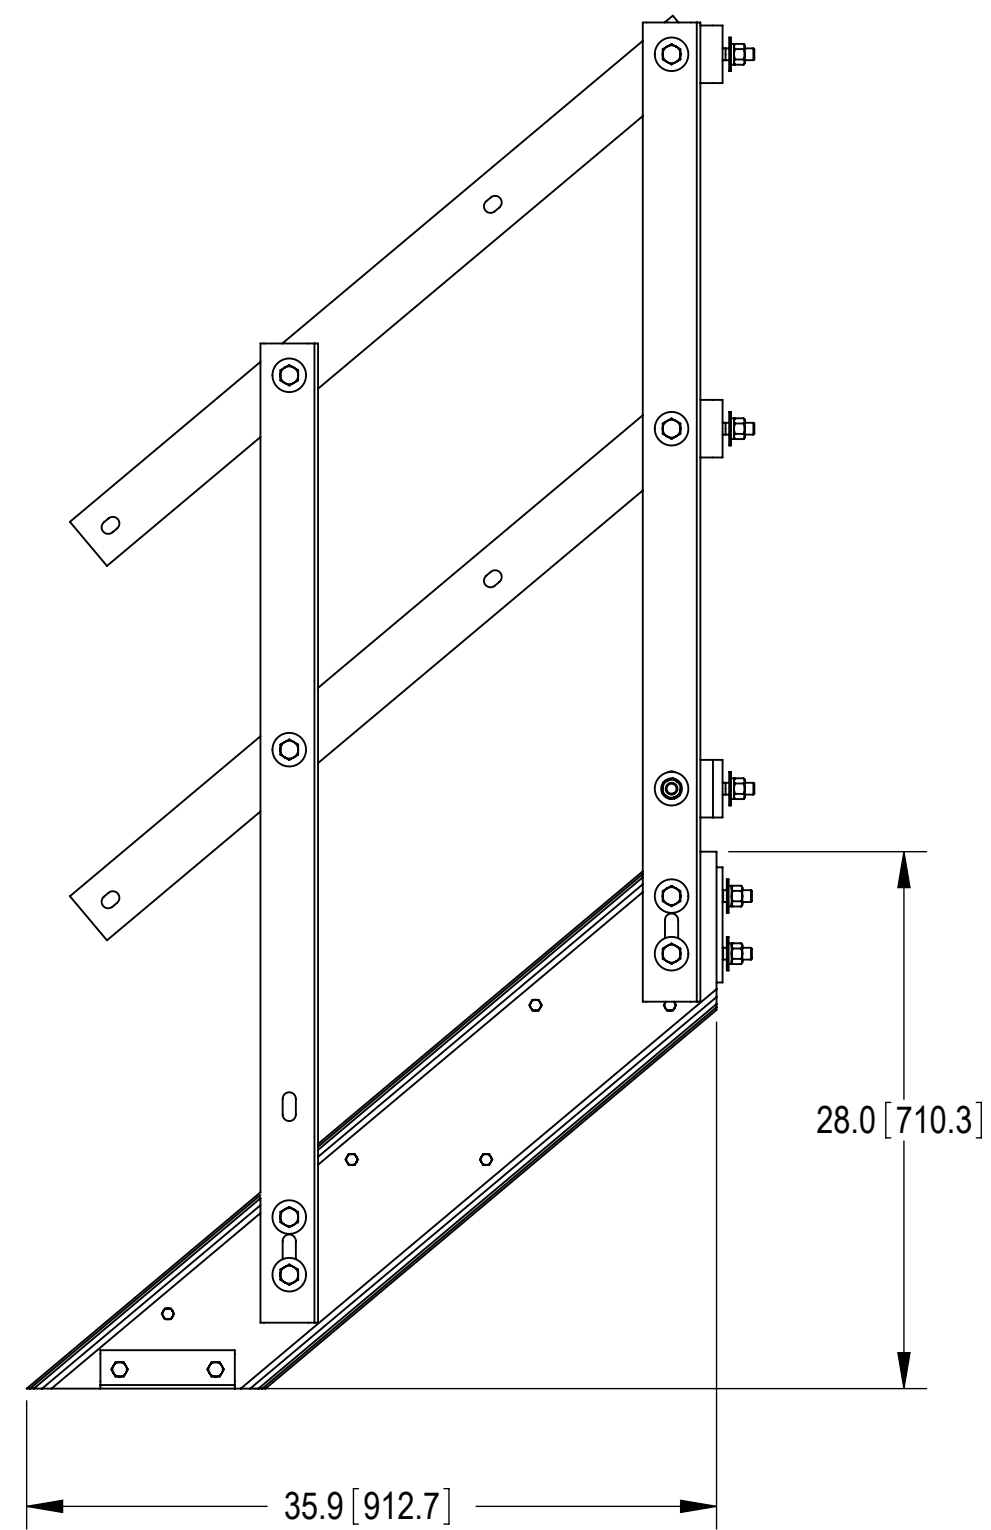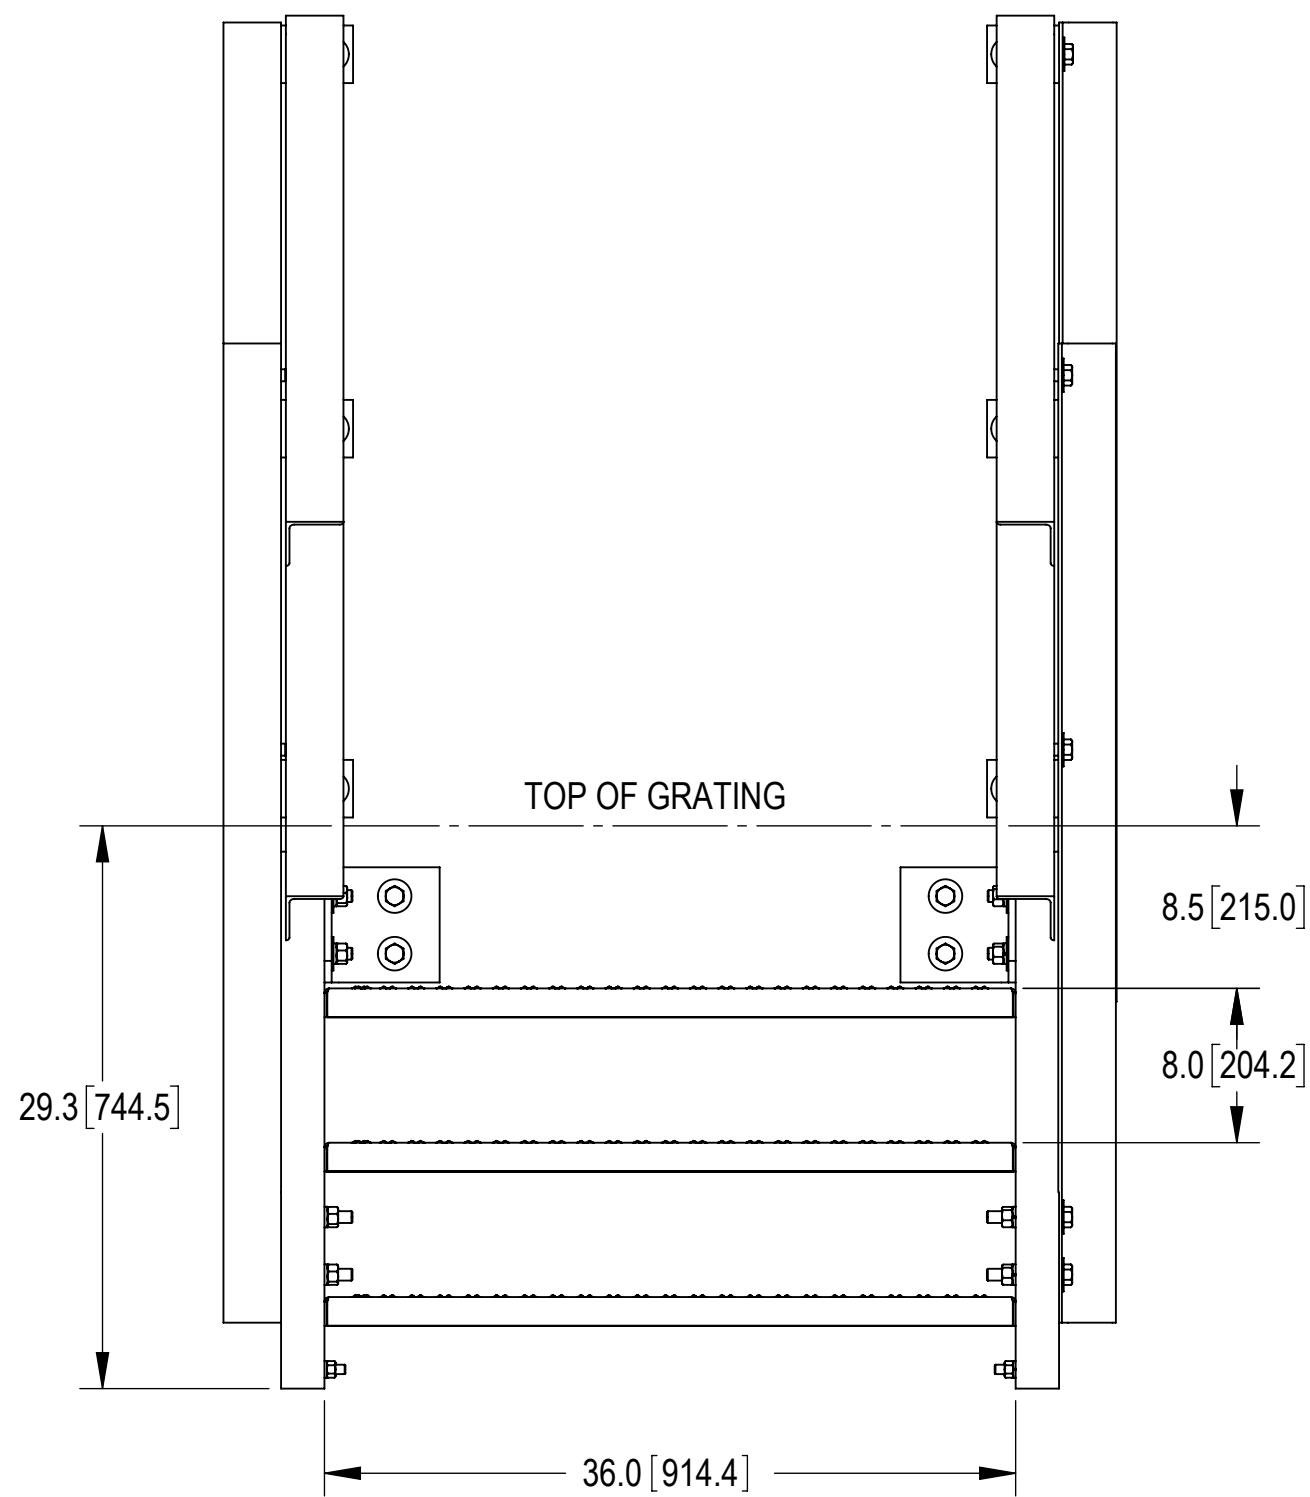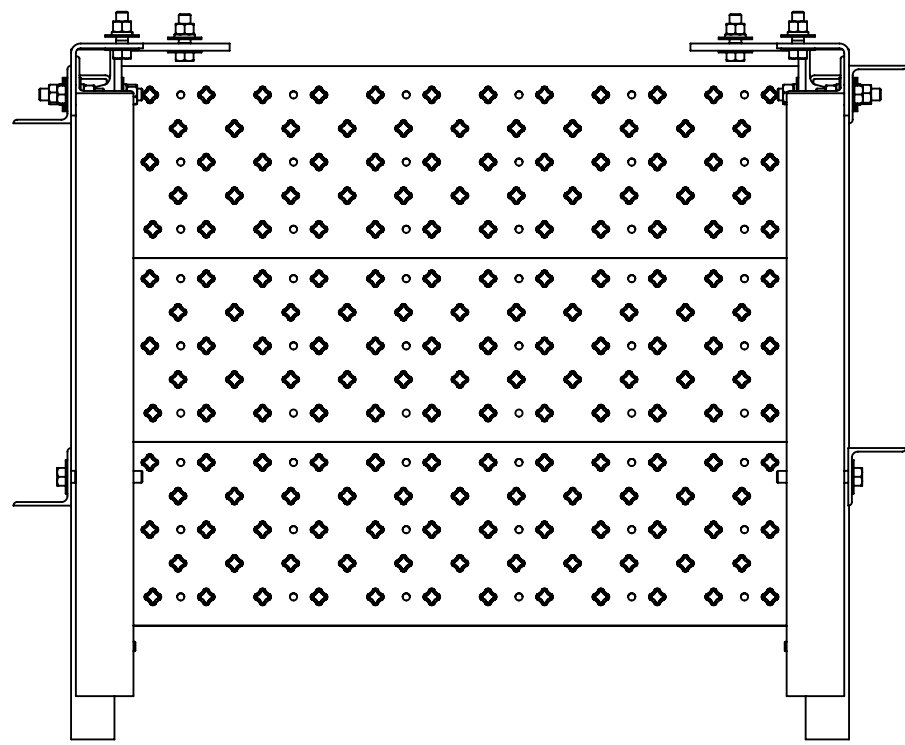


TITLE				
EQ-P STEP KIT (3) STEPS, 29" ELEVATION				
SIZE	SCALE	DOCUMENT NO.		
C	1:1	EQ-STEP-3		
 		DRAWING		
		VERSION	STATUS	REVISION
		01	RE	F
SHEET				2 OF 7

Confidential

ASSEMBLING STEPS TO BASE/RAILING ASSEMBLIES

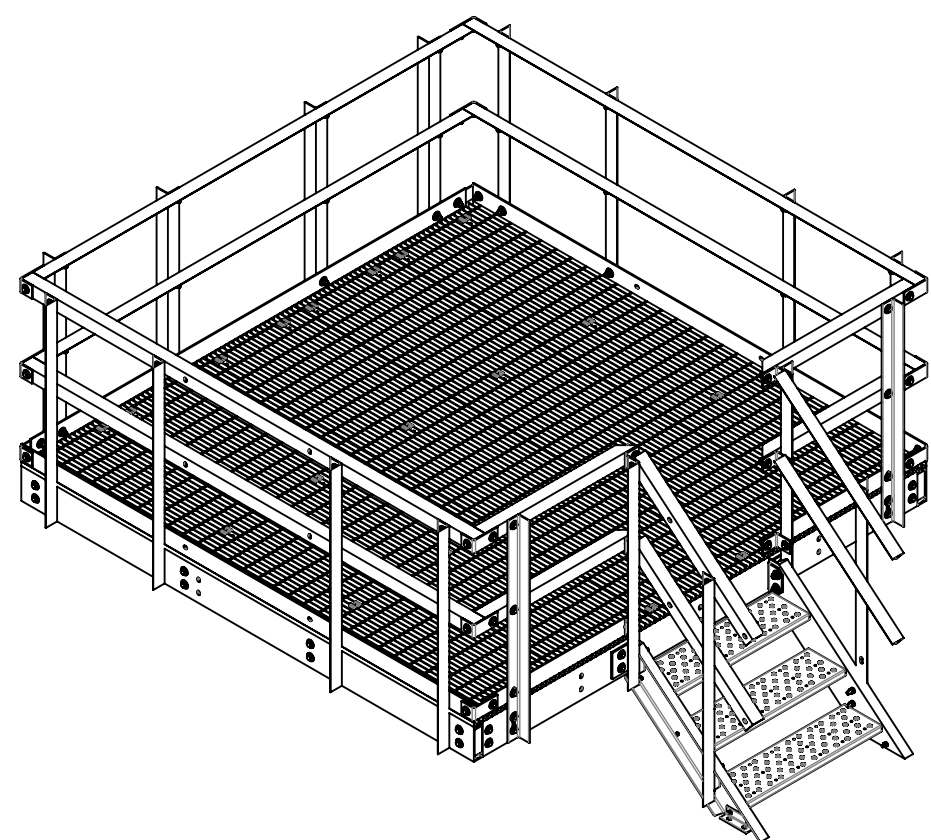

OUTWARD BRACKET ORIENTATION

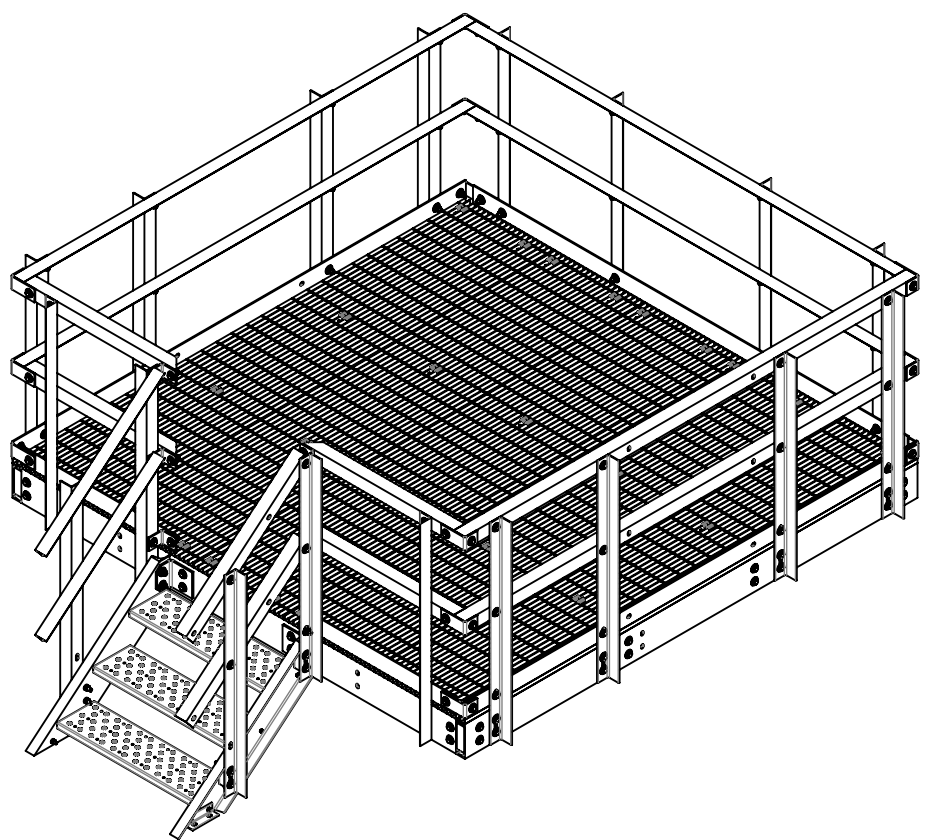

INWARD BRACKET ORIENTATION

Before Installing Step Assembly to Base and Rails, it is recommended that all instructions used to assemble the Rails to the Base are completed PRIOR to assembling Steps to "Assembled" Base and Railing.

- STEP #1: Locate area where Step Assembly will be attached. (Step Assembly can be attached to any side of Base/Rail Assembly.)
- STEP #2: Align Steps (Assembled) to previously ASSEMBLED Railing and Base, Making sure that all hole locations are NOT blocked by any other components (Screws, brackets, and etc.)
- STEP #3: Once Step assembly location is establish, LOCATE and MARK hole positions that will require technician(s) to Field Drill holes for attaching Steps to Base/Rail Assembly.
- STEP #4: Field Drill all holes needed to attach steps to Base/Rail Assembly.
- STEP #5: Align Step assembly to Field drilled holes in Step #4.
- STEP #6: Insert Bolts into Field drilled holes and attach washers and nuts. (DO NOT COMPLETELY TIGHTEN, at this time!!!)
- STEP #7: After determining all parts are aligned and not resticted by any objects. Proceed to STEP #8.
- STEP #8: Tighten all Nuts and Bolts to specified torque requirements. Proceed to STEP #9.
- STEP #9: Measure Step Assembly opening.....(See Diagram on Sheet 7)
- STEP #10: Using diagram on Sheet 7 (Detail H) as a reference, proceed to create Cut-Out in railing for stairway opening. Make sure, Steps 1-9 are COMPLETED PRIOR to this step, for BEST RESULTS.

Confidential


 ANDREW ® an Amphenol company				
TITLE EQ-P STEP KIT (3) STEPS, 29" ELEVATION				
SIZE C	SCALE 1:32	DOCUMENT NO. EQ-STEP-3		
 		DRAWING		
		VERSION 01	STATUS RE	REVISION F
				SHEET 3 OF 7

STAIR BRACKET ORIENTATIONS


During installation of platforms, brackets that connect the step assembly to the base may need to be orientated in different ways to accomodate certain customer installation needs. With customized installation locations, technicians will be required to "Field Drill" bracket holes in the base's outer frame in order to place steps in positions needed to fit their needs. Handrail Clips that fasten the stair's railing to the base's handrails will also require "field drilling" for proper installation. The following diagrams give examples of how to meet those requirements, properly.

INWARD BRACKET ORIENTATION


OUTWARD BRACKET ORIENTATION

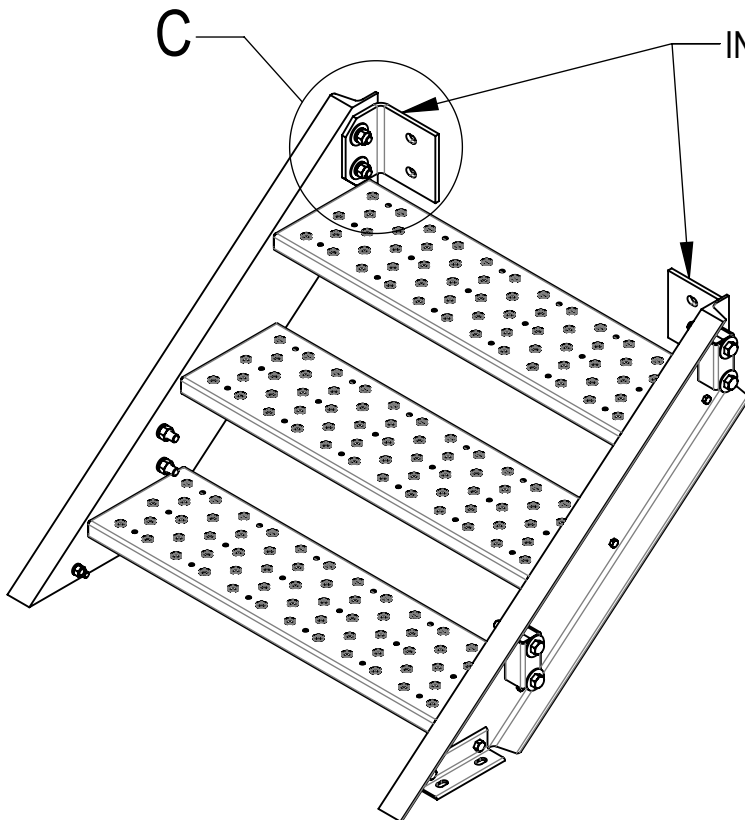


INNER POSITION

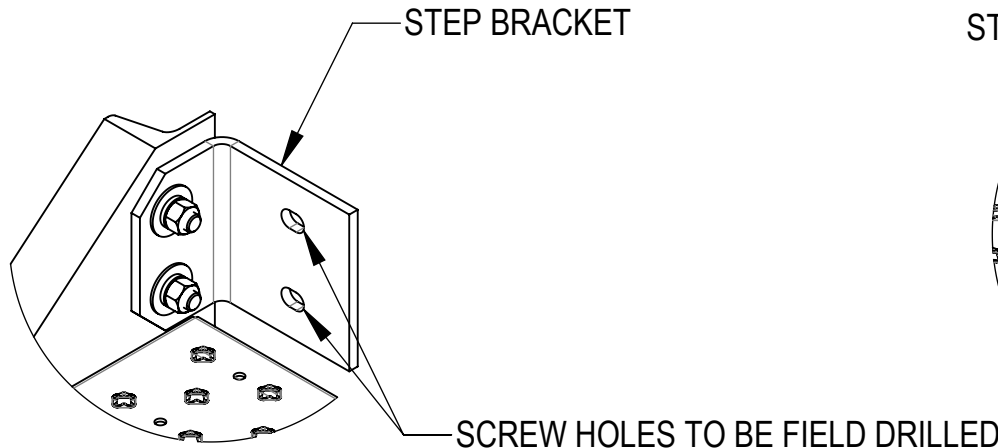



DETAIL C
SCALE 1 : 6

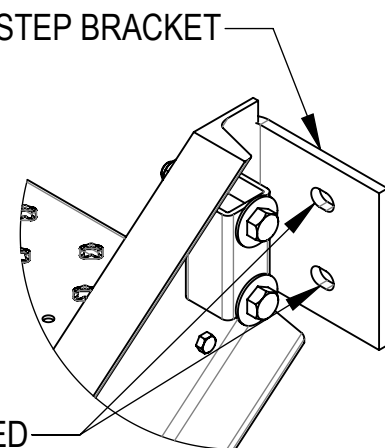

DETAIL D
SCALE 1 : 6

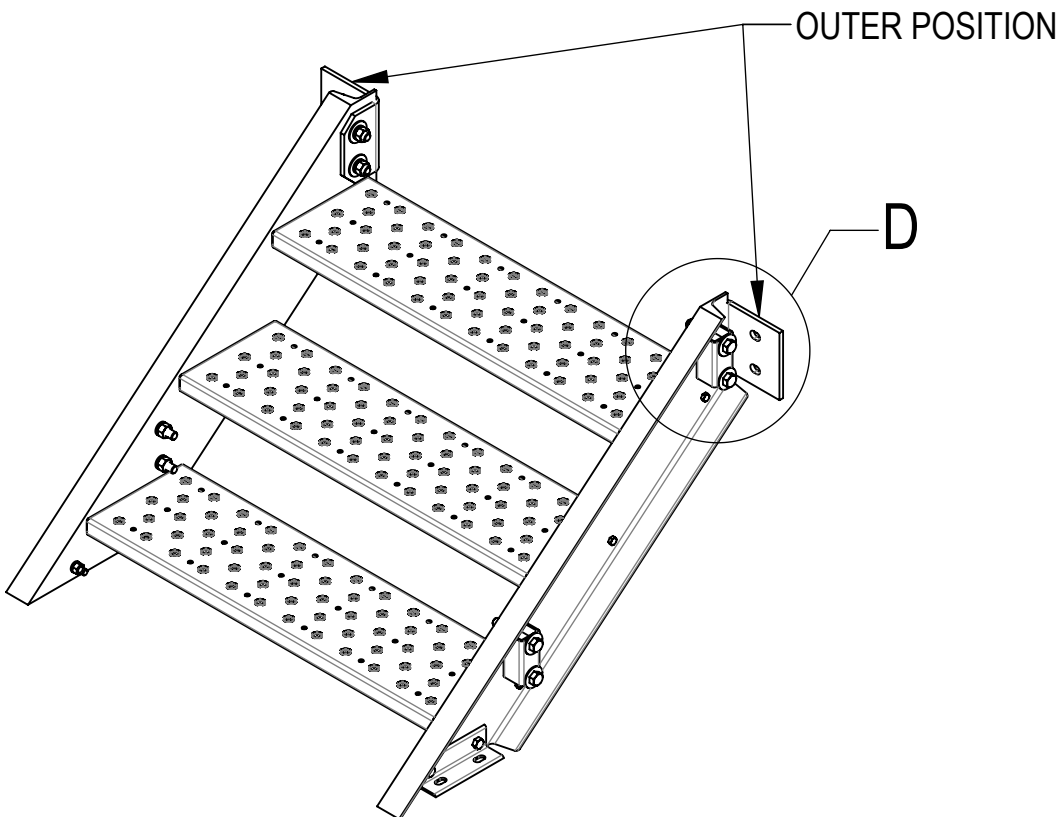


OUTER POSITION

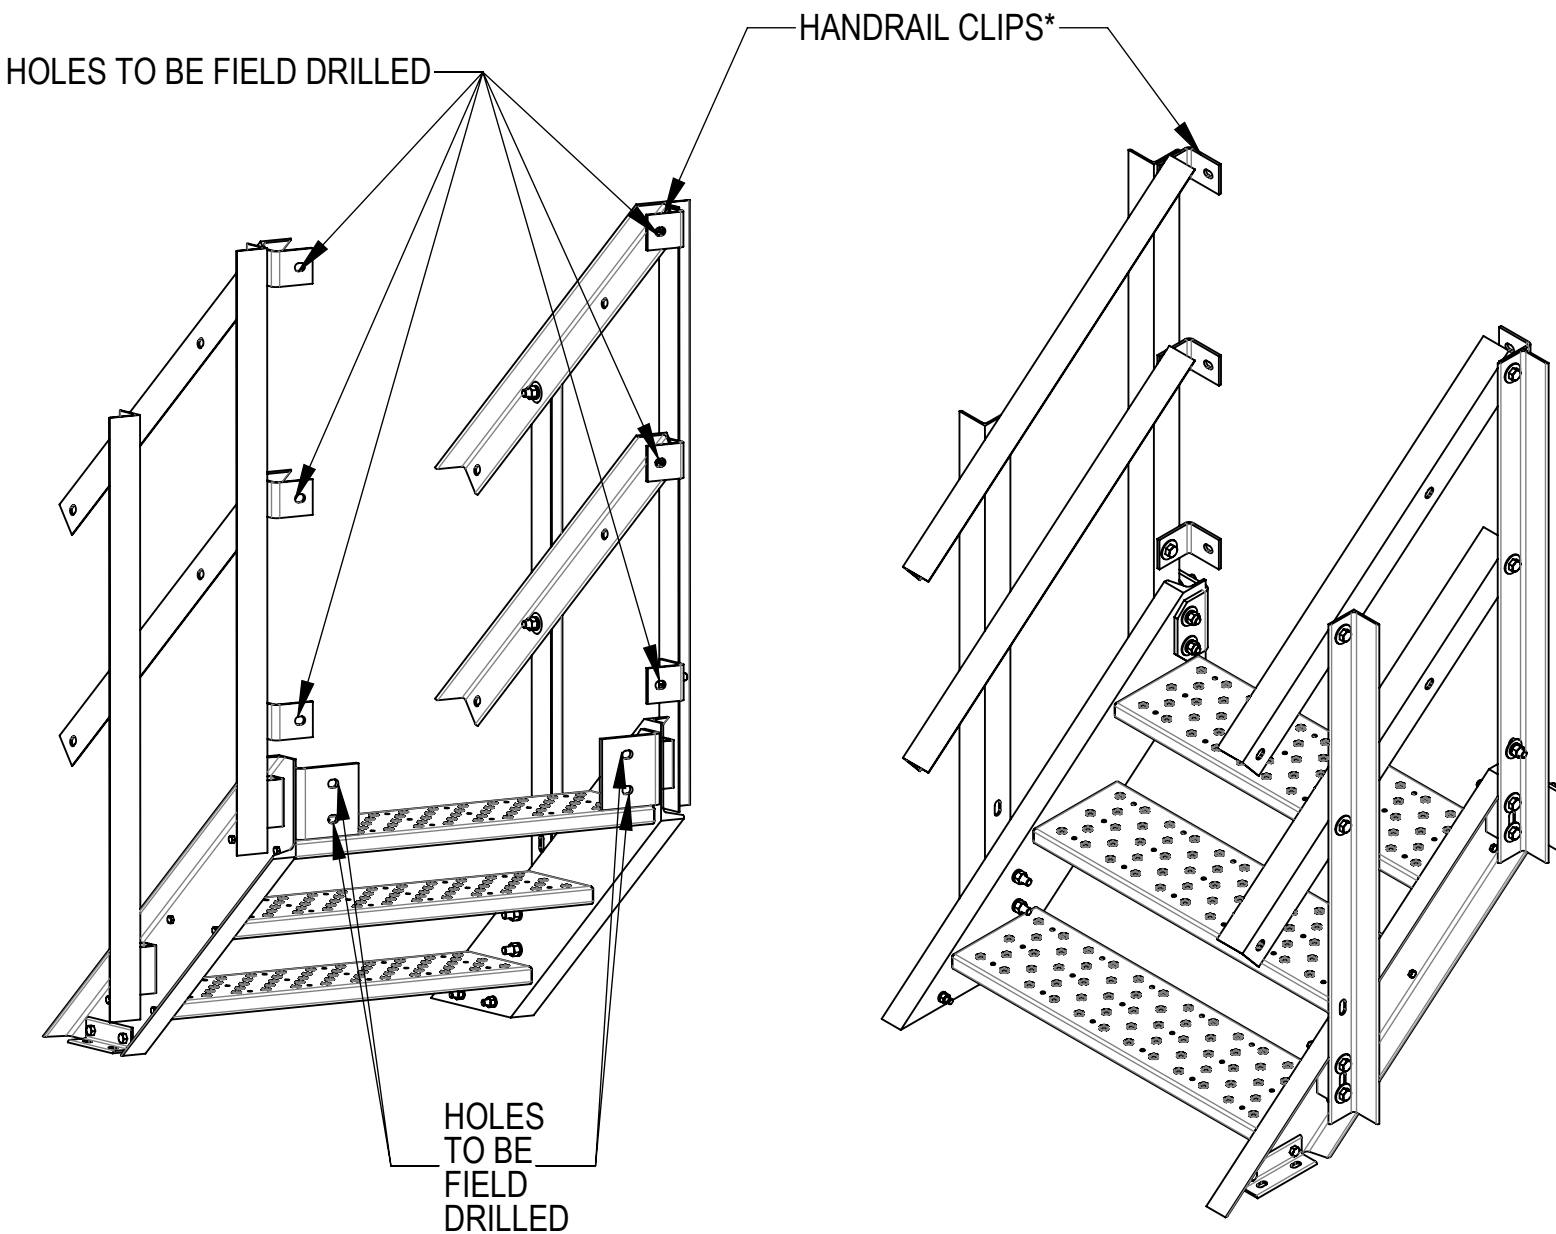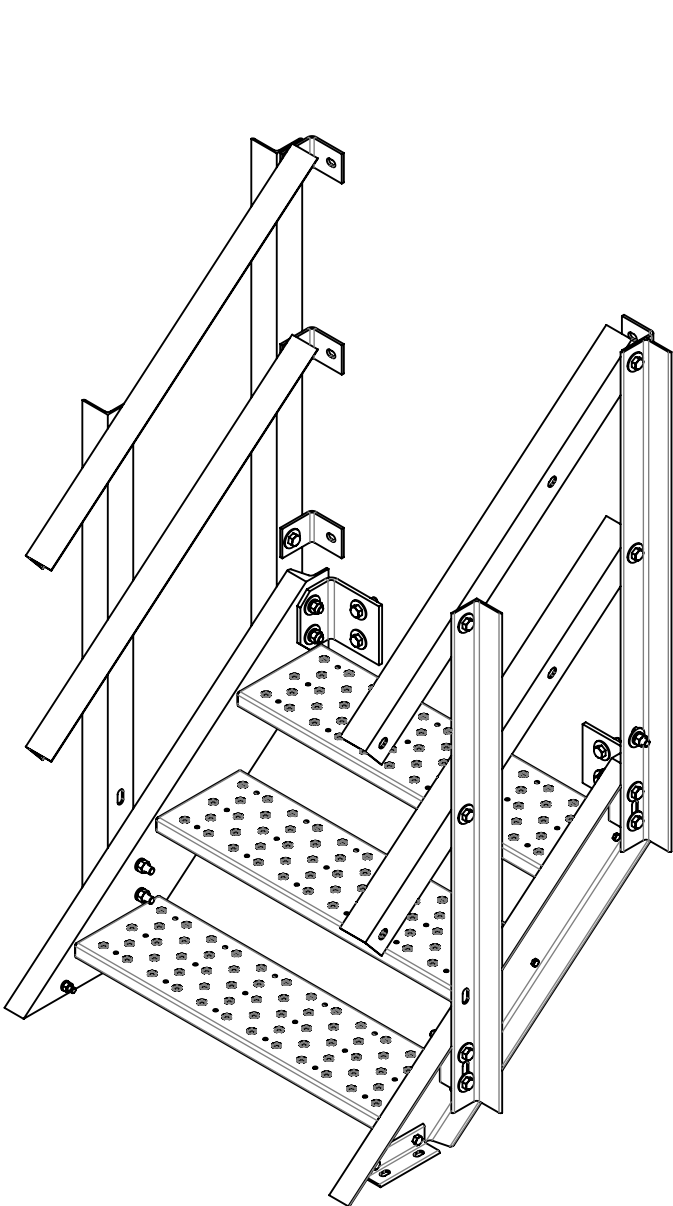

HOLES TO BE FIELD DRILLED

HANDRAIL CLIPS*

HOLES
TO BE
FIELD
DRILLED

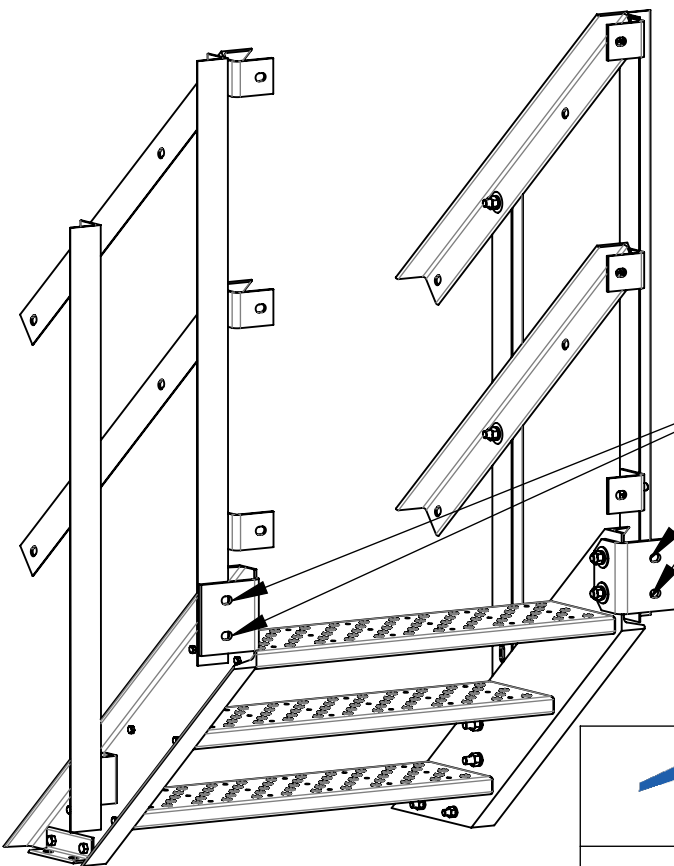

HOLES
TO BE
FIELD
DRILLED

*HANDRAIL CLIPS MUST BE ORIENTATED ACCORDING TO INSTALLATION INSTRUCTIONS TO PREVENT INJURY.


ANDREW® an Amphenol company

TITLE
EQ-P STEP KIT (3) STEPS, 29" ELEVATION

SIZE
C

SCALE
1:12

DOCUMENT NO.
EQ-STEP-3





DRAWING
VERSION STATUS REVISION
01 RE F

SHEET
4 OF 7

Confidential

INWARD BRACKET ORIENTATION

PLEASE NOTE: STEPS AND HANDRAILS CAN BE ATTACHED TO EITHER SIDE OF PLATFORM BASE.
(SOME COMPONENTS REMOVED FOR CLARITY)

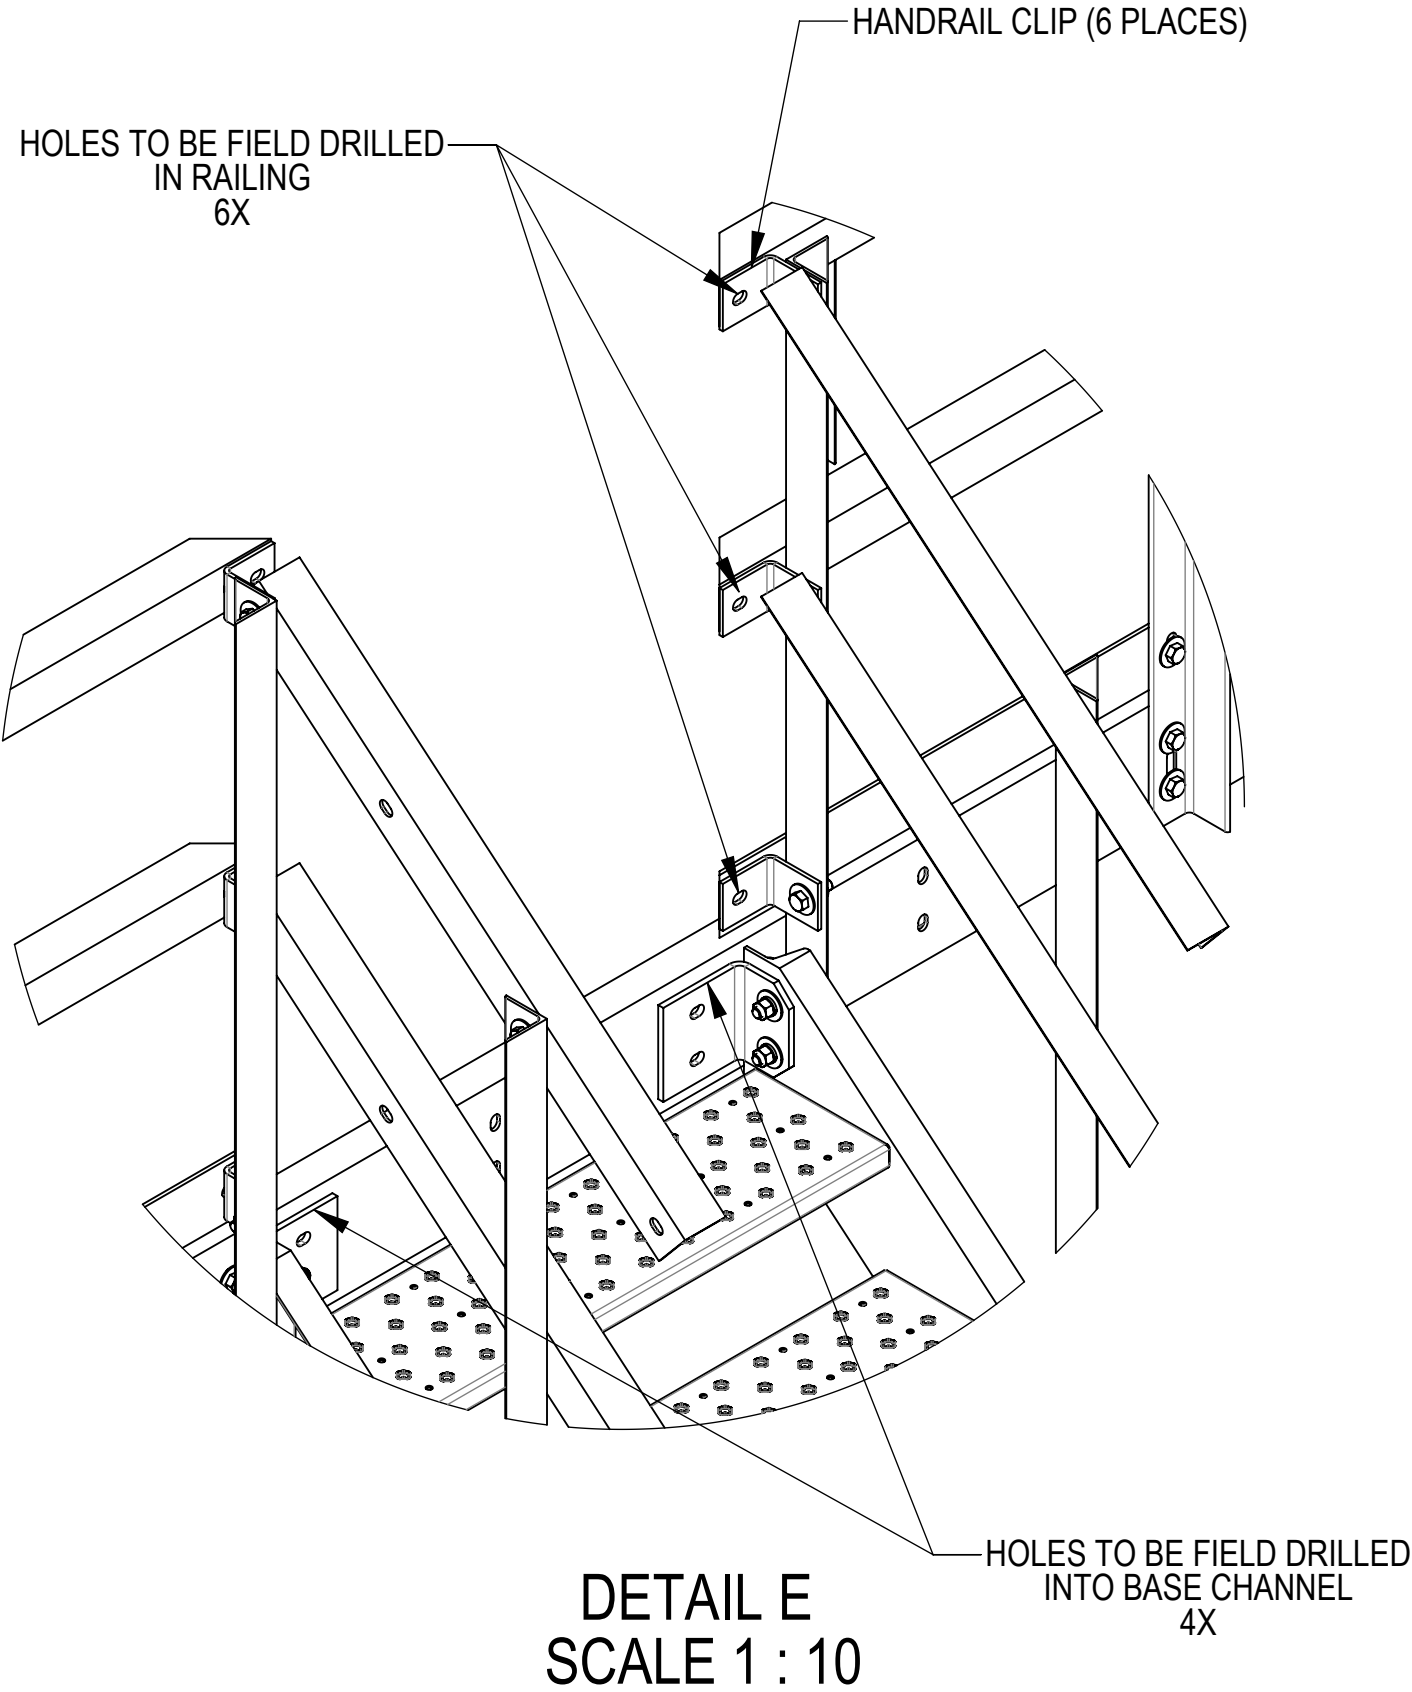
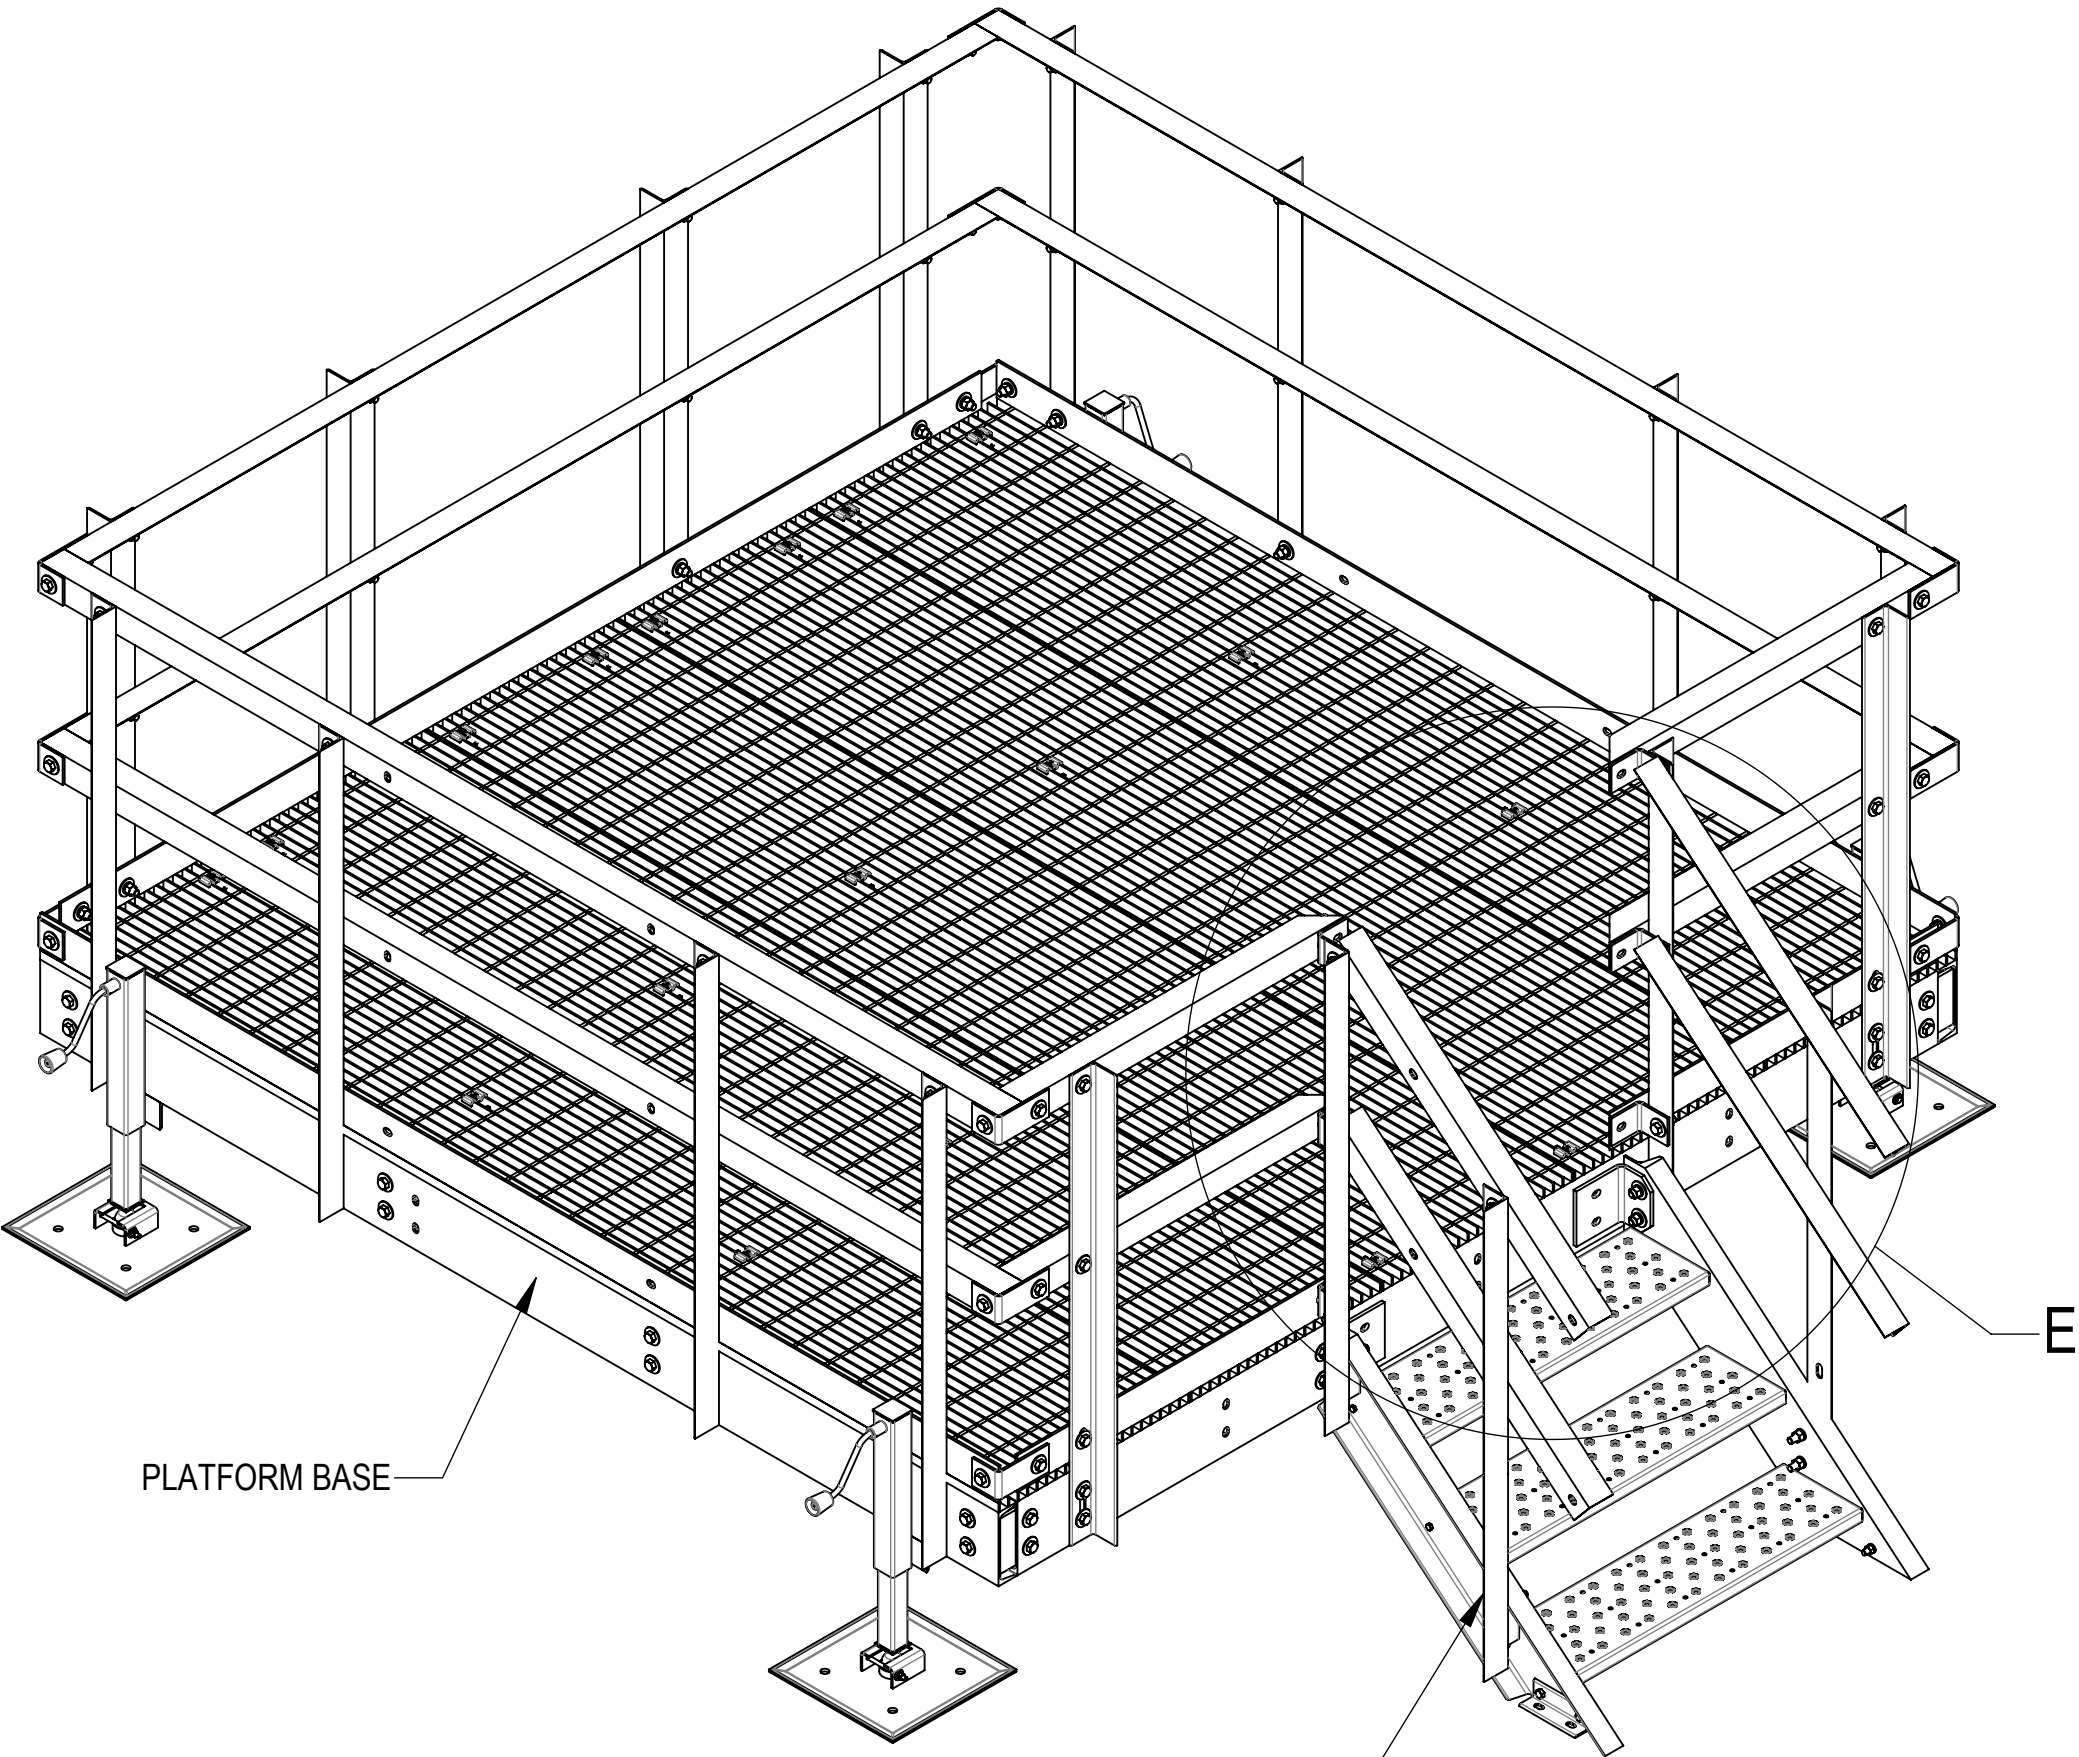


				
TITLE EQ-P STEP KIT (3) STEPS, 29" ELEVATION				
SIZE C	SCALE 1:12	DOCUMENT NO. EQ-STEP-3		
 		DRAWING		
		VERSION 01	STATUS RE	REVISION F
SHEET 5 OF 7				

Confidential

OUTWARD BRACKET ORIENTATION


PLEASE NOTE: STEPS AND HANDRAILS CAN BE ATTACHED TO EITHER SIDE OF PLATFORM BASE.
(SOME COMPONENTS REMOVED FOR CLARITY)

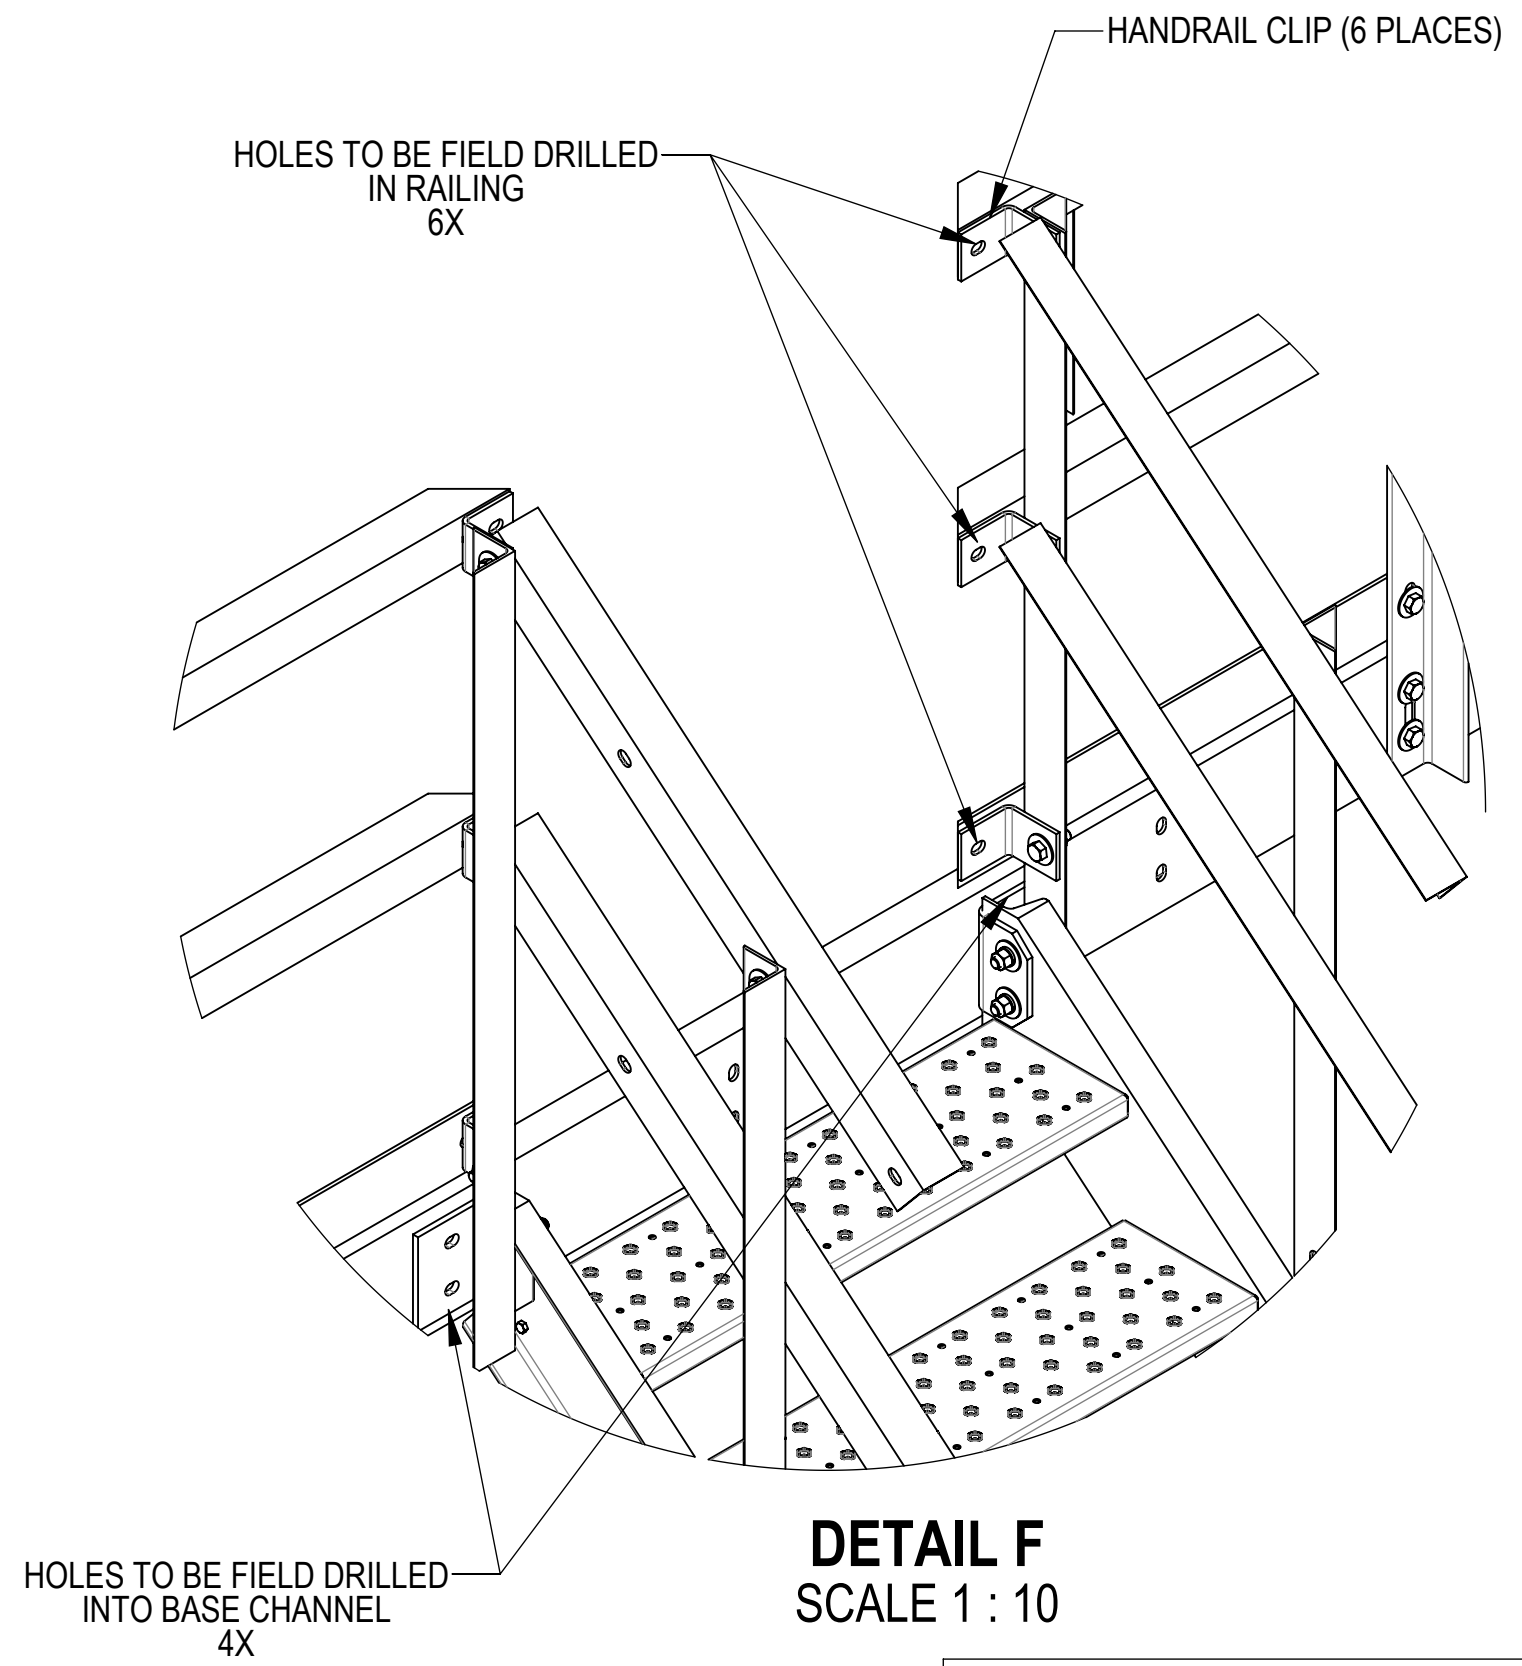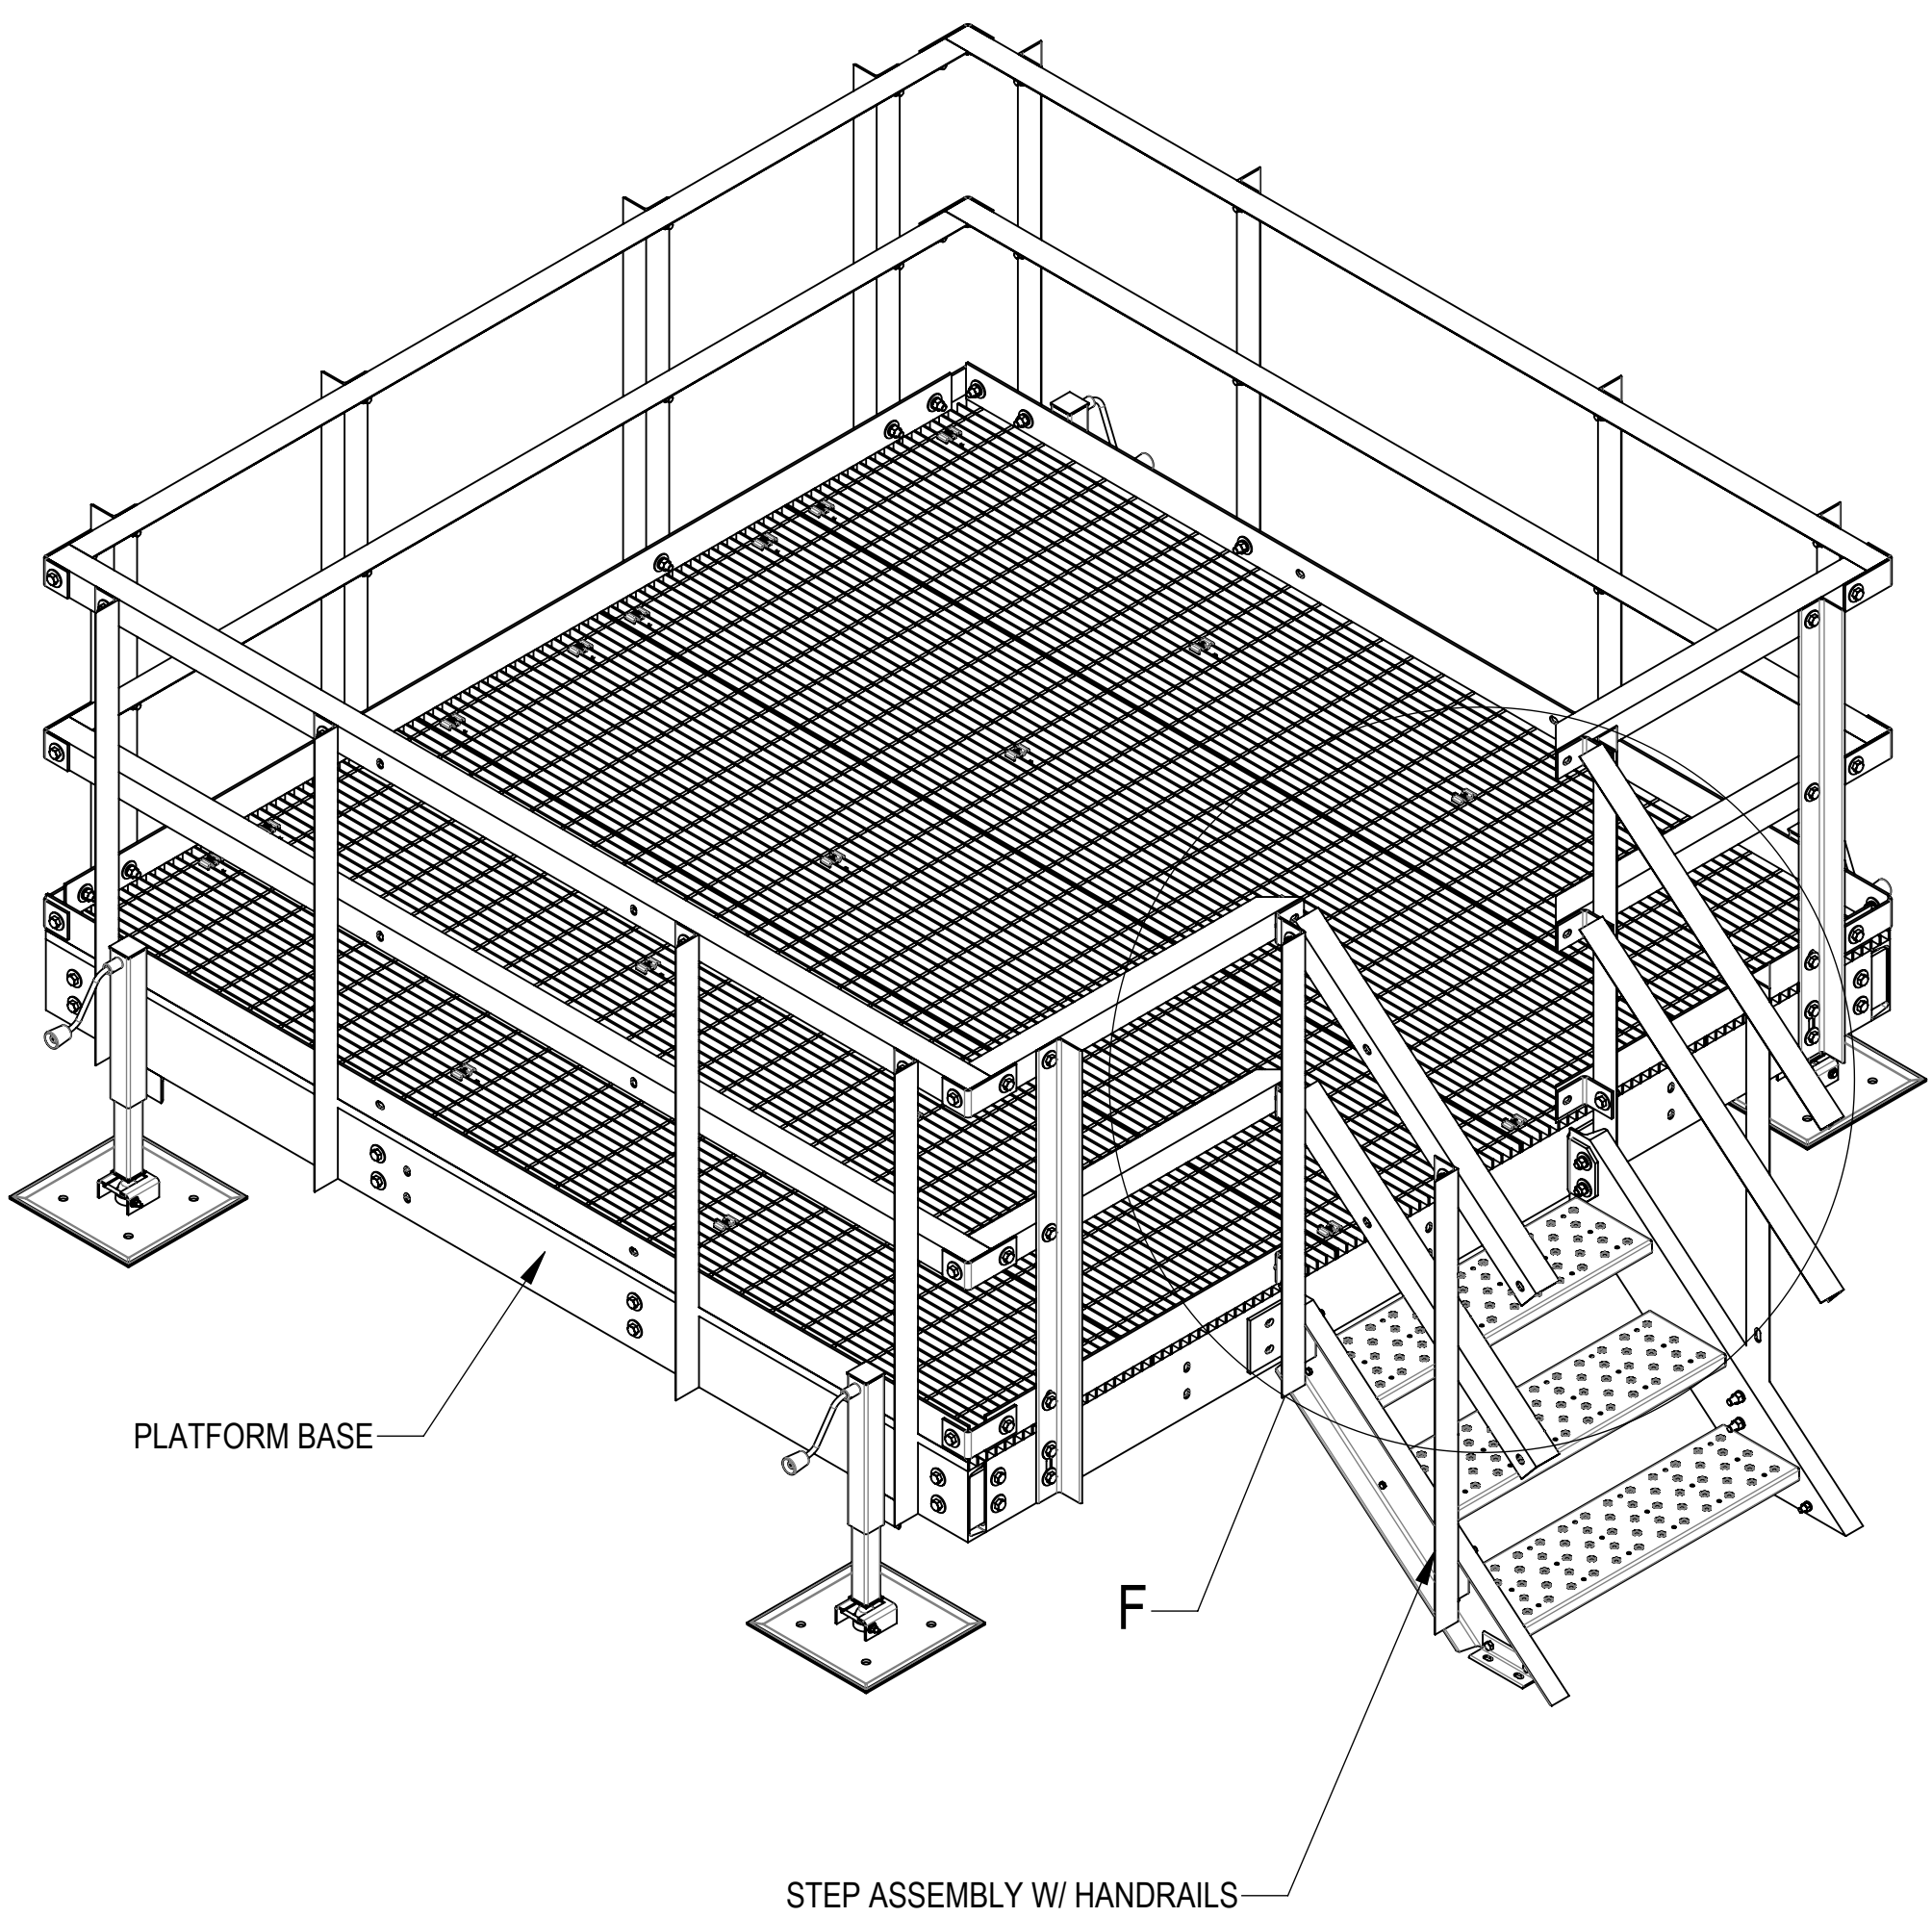


DETAIL F
SCALE 1 : 10

				
TITLE EQ-P STEP KIT (3) STEPS, 29" ELEVATION				
SIZE C	SCALE 1:12	DOCUMENT NO. EQ-STEP-3		
 		DRAWING		
		VERSION 01	STATUS RE	REVISION F
SHEET 6 OF 7				

Confidential

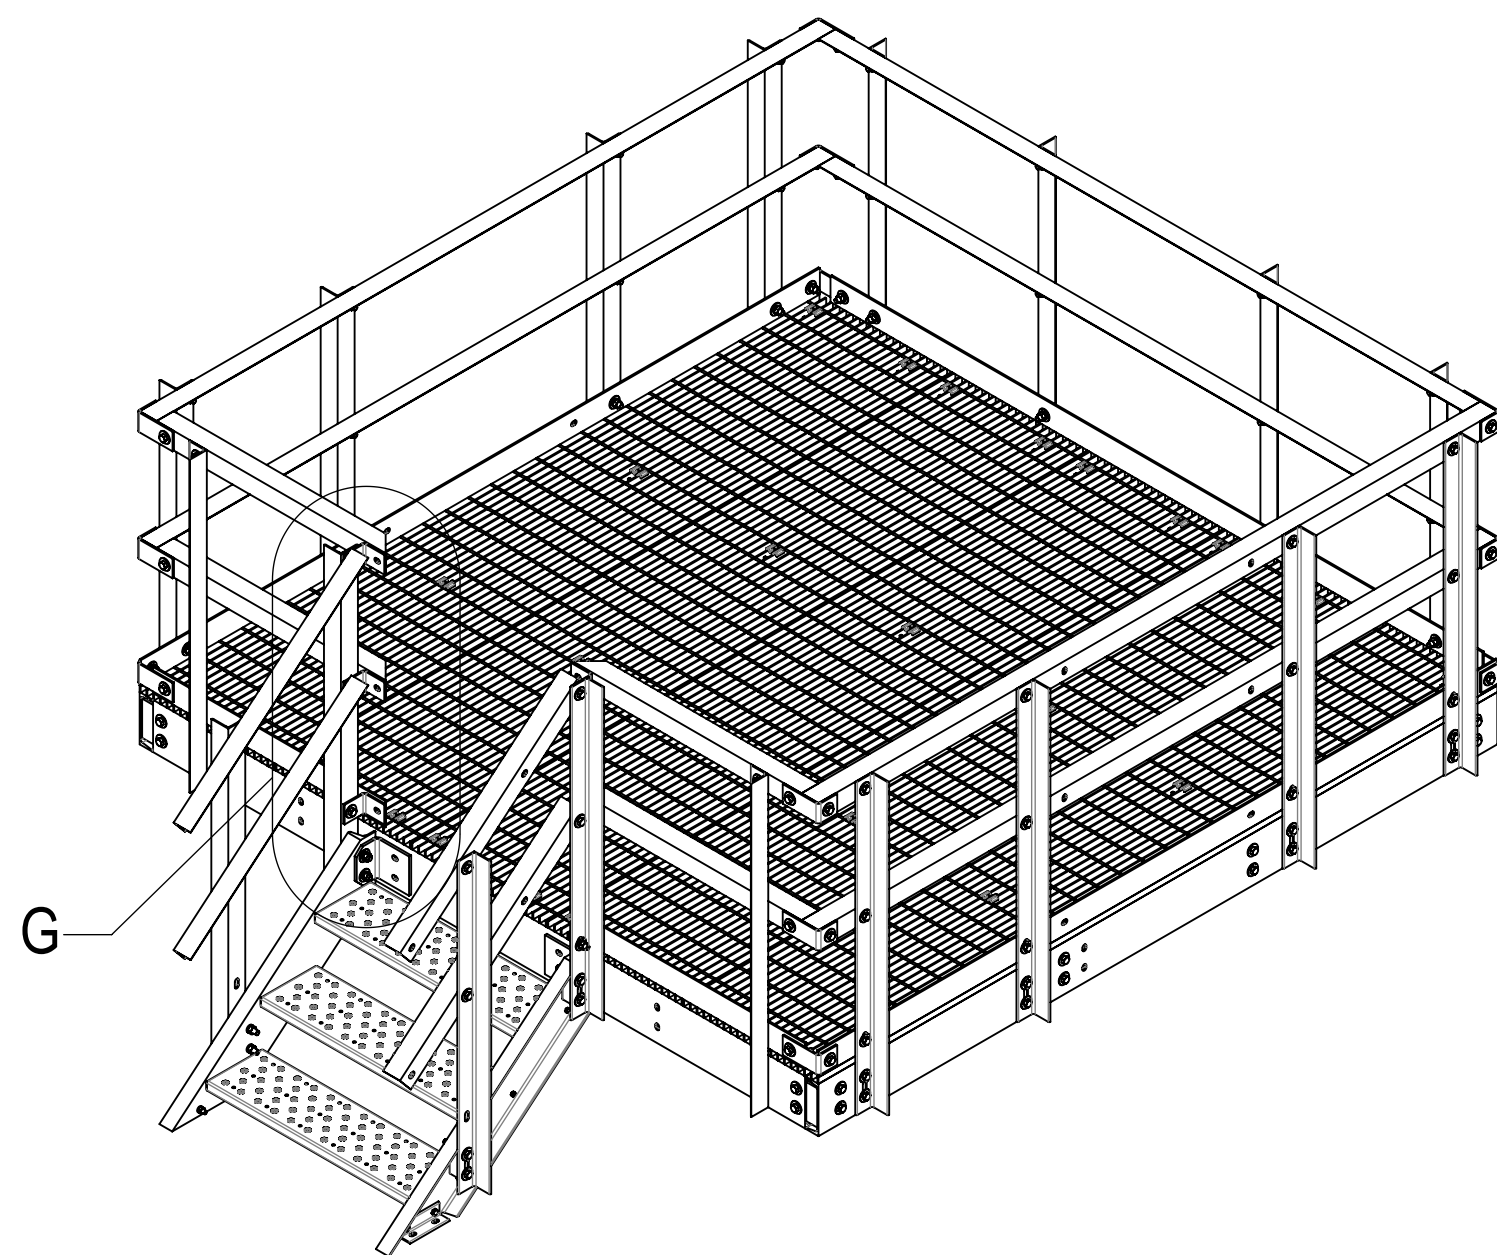


"CUT-OUT"
VIEW

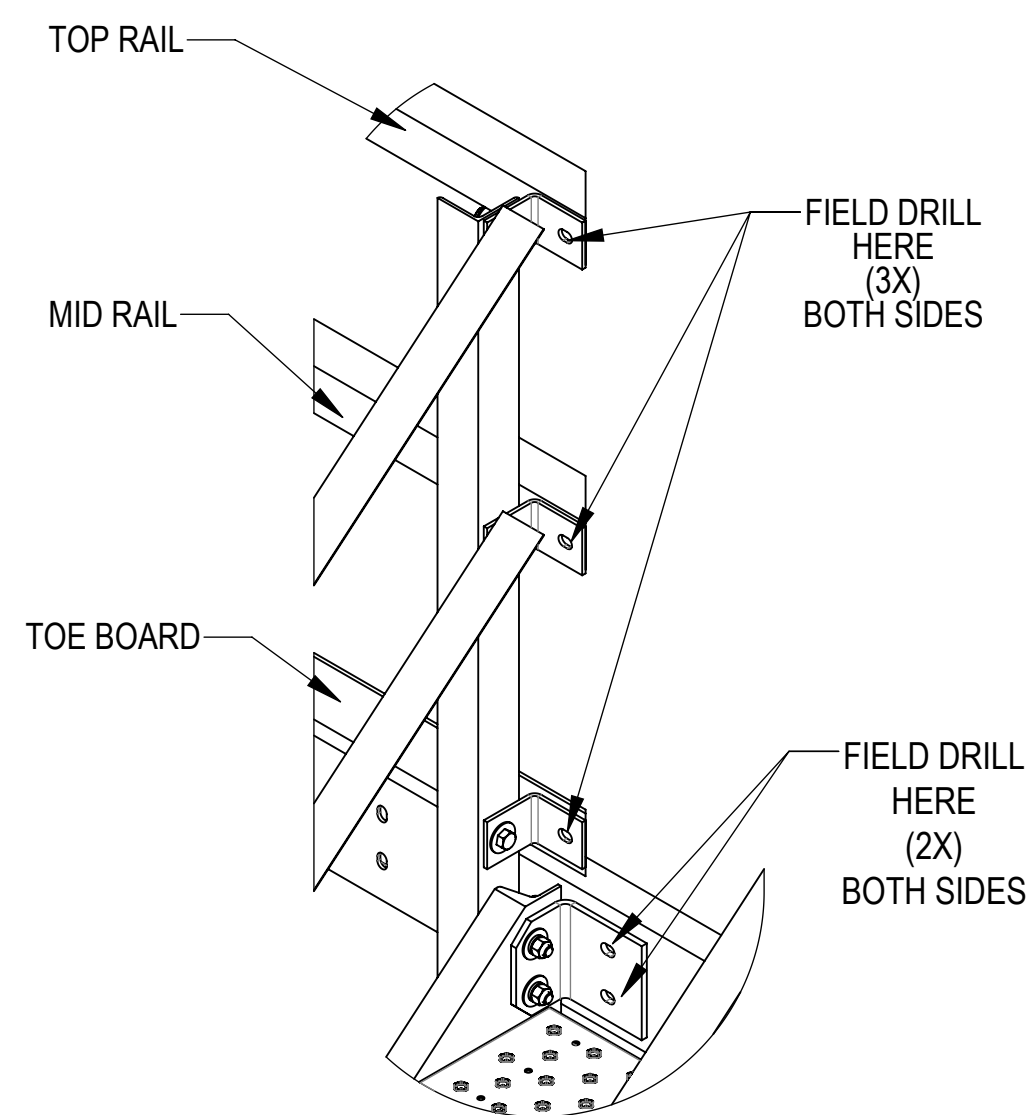


DETAIL G
SCALE 1 : 10
(SOME COMPONENTS REMOVED FOR CLARITY.)

(THIS VIEW IS FOR REFERENCE ONLY*)
*TECHNICIAN WILL HAVE TO DETERMINE CUT-OUT DIMENSIONS
FOR THEIR CUSTOMIZED APPLICATION.

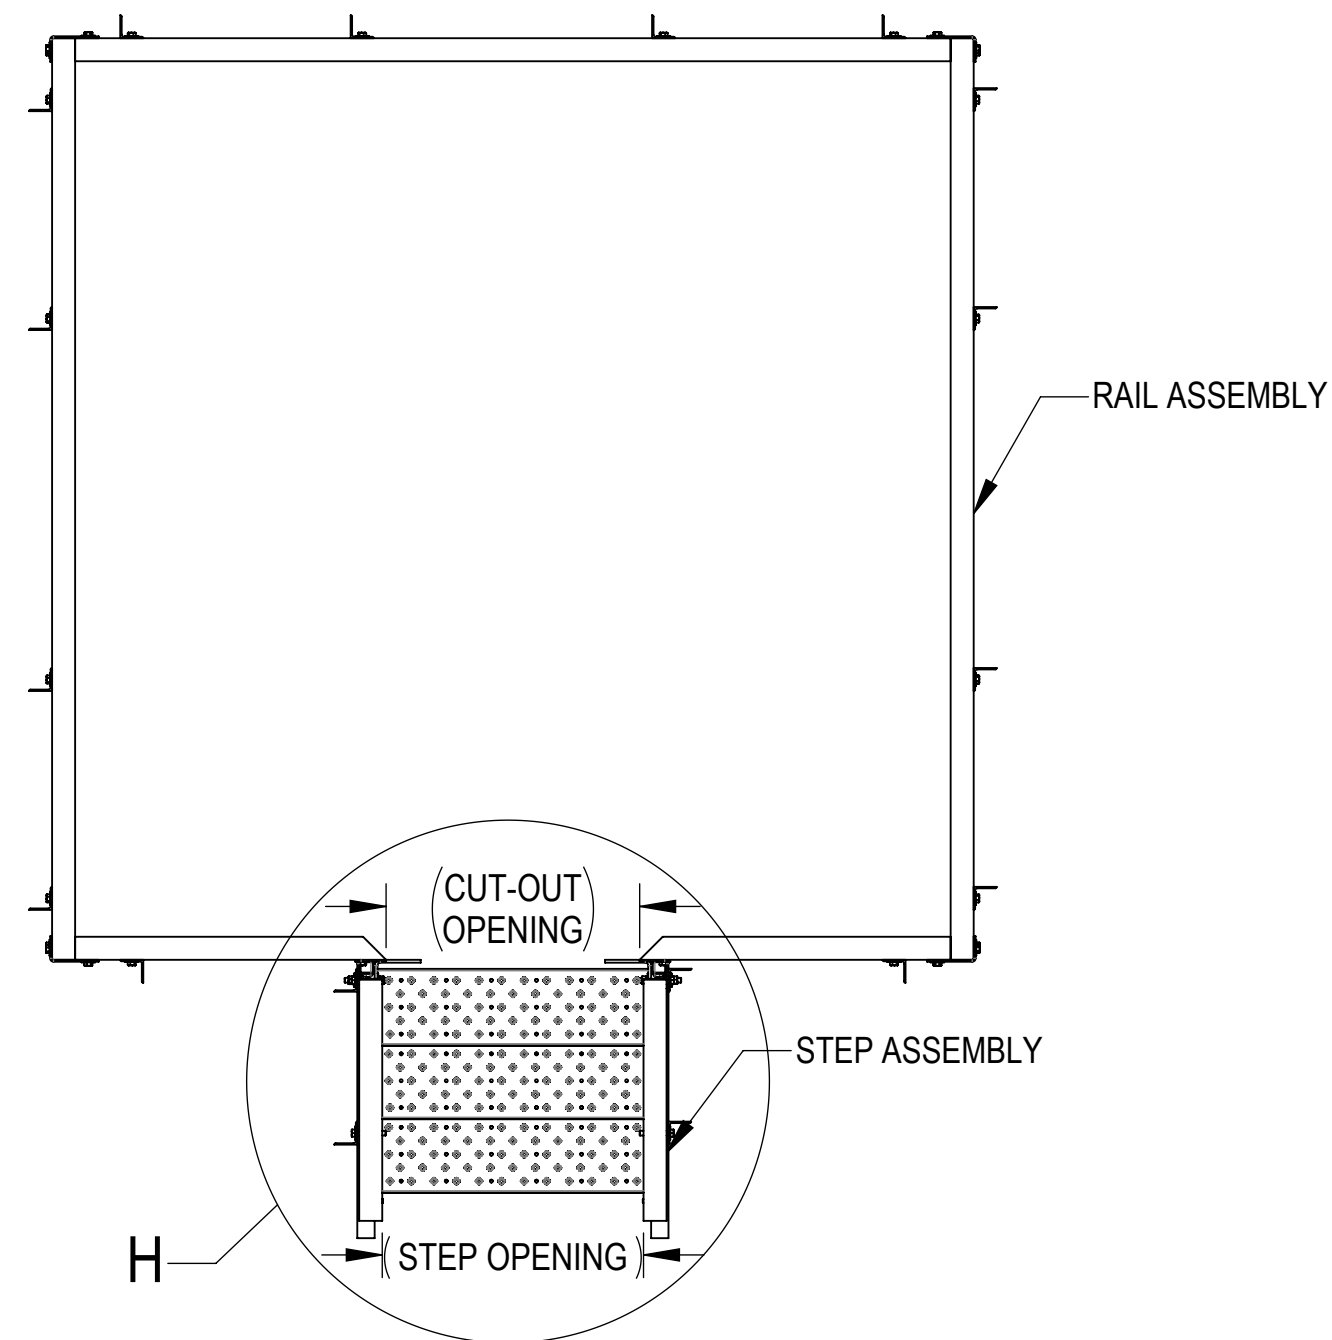

TOP VIEW
(SOME COMPONENTS REMOVED FOR CLARITY.)

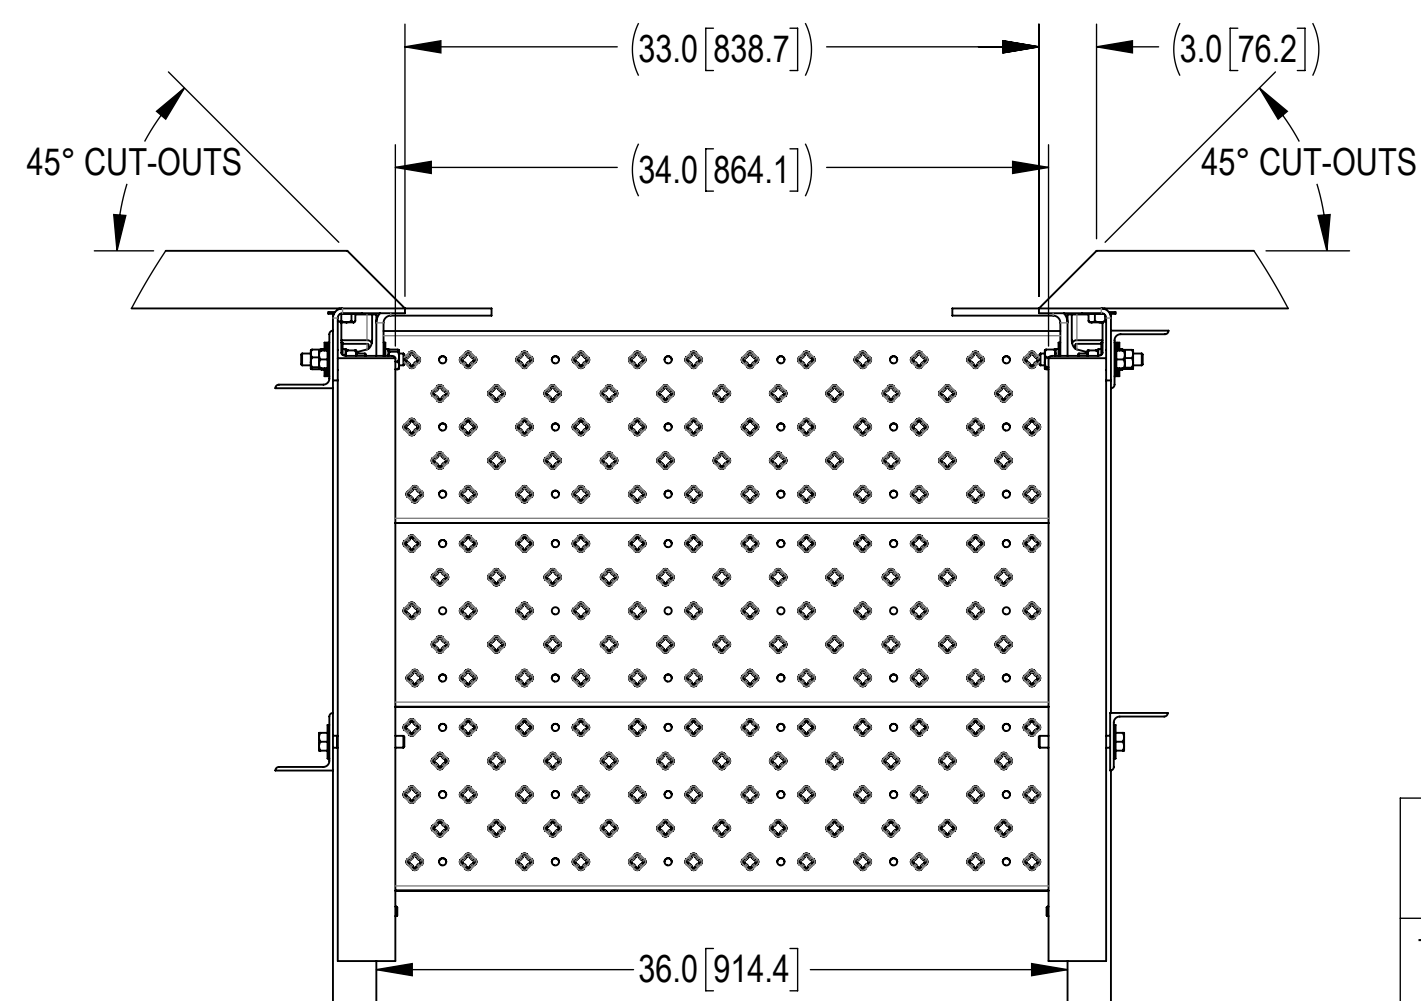

DETAIL H
SCALE 1 : 10
THIS VIEW FOR REFERENCE ONLY
(SOME COMPONENTS REMOVED FOR CLARITY.)



TITLE
EQ-P STEP KIT (3) STEPS, 29" ELEVATION

SIZE	SCALE	DOCUMENT NO.			
C	1:12	EQ-STEP-3			
		DRAWING			SHEET
		VERSION	STATUS	REVISION	
		01	RE	F	7 OF 7

Confidential